NETWORK TECHNOLOGIES INCORPORATED
1275 Danner Dr Tel:330-562-7070
Aurora, OH 44202 Fax:330-562-1999
www.networktechinc.com

ENVIROMUX® Series

ENVIROMUX-MNG

Enterprise Environment Monitoring System Management Software

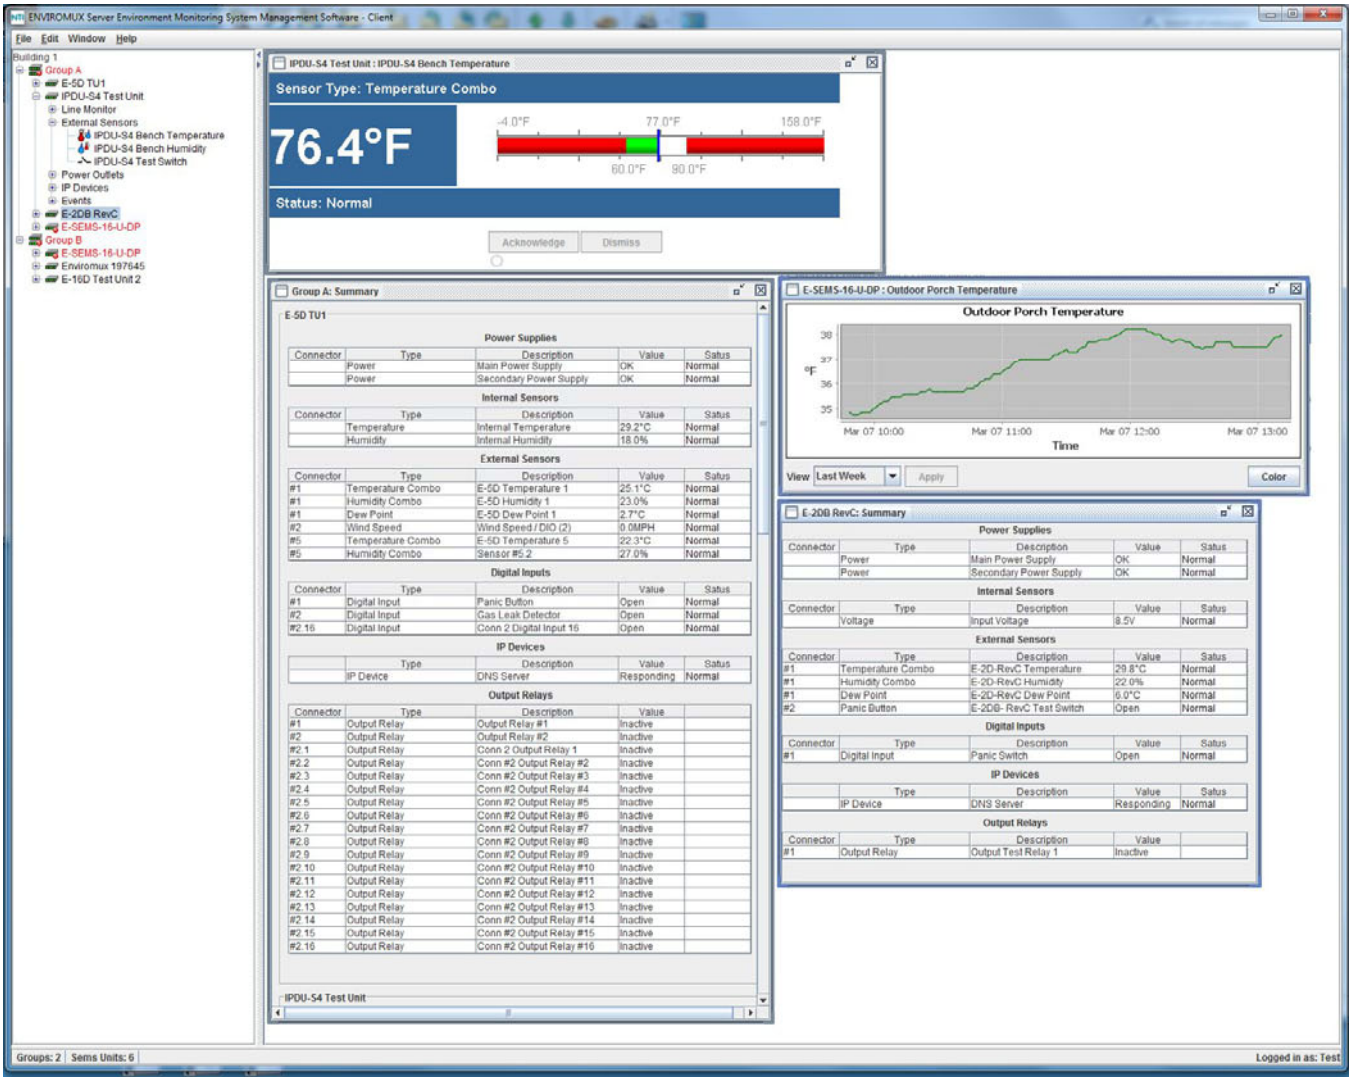

TRADEMARK
ENVIROMUX is a registered trademark of Network Technologies Inc in the U.S. and other countries.

COPYRIGHT
Copyright © 2009- 2016 by Network Technologies Inc. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written consent of Network Technologies Inc, 1275 Danner Drive, Aurora, Ohio 44202.

CHANGES
The material in this guide is for information only and is subject to change without notice. Network Technologies Inc reserves the right to make changes in the product design without reservation and without notification to its users.

Table of Contents

Introduction **1**
Materials **3**
Limitations **3**
Installation **4**
Licensing 4
Get Machine ID 5
Install Permanent License 6
From the Command Line 8
Start the Server, Configuration is Done 8
Server Management **9**
Manage From the GUI (Graphical User Interface) 9
Add UNITs to Monitor 9
Device Discovery Tool 10
Add ENVIROMUX-MNG Users 11
Edit ENVIROMUX-MNG Users 11
UNIT Loses Connection 12
Manage From the Command Line 13
Using a Client **14**
User Connection 14
Project Management 15
Create a Project 15
Open a Project 18
Delete a Project 20
Remote UNIT Management 21
View Summary 21
View Scrolling Summary 23
Configuration Options 24
User Configuration 26
Log Configuration 27
Sensor Monitoring and Configuration 28
Respond to Alerts 32
Server Management from the Client 34
Software Update **35**
Setup Enviromux-MNG to Run At Startup **35**
Index **36**

Table of Figures

Figure 1- End User License Agreement 4
Figure 2- License Installation screen 5
Figure 3- Server software-Install License tab 5
Figure 4- License Activation screen 5
Figure 5- Registration and License Request Form 6
Figure 6- Login to server 9
Figure 7- Add UNITS to monitor 9
Figure 8- Device Discovery Tool page 10
Figure 9- Create new user 11
Figure 10- Edit User 11
Figure 11- UNIT has lost connection to network 12
Figure 12- Reload UNIT to restore sensing and management 12
Figure 13- Login at a Client 14
Figure 14- Empty list- no Projects defined yet 14
Figure 15- File Menu choices 15
Figure 16- Select Project Settings 15
Figure 17- Define a new project 16
Figure 18- Change names of project and groups 17
Figure 19- Project and groups exploded to view UNITs 17

Figure 20- Exploded view of ENVIROMUX-MNG 18
Figure 21- Open existing project 18
Figure 22- List of existing projects 19
Figure 23- Existing project open, ready for viewing 19
Figure 24- Deleting a project 20
Figure 25- Options with right click on UNIT 21
Figure 26- Summary view of sensors in a UNIT 21
Figure 27- View multiple summary pages in Cascade View 22
Figure 28- View summary pages in Tile View 22
Figure 29- Scrolling window for controlled view of sensor status 23
Figure 30- Scrolling summary window can be used for a group of Units 23
Figure 31- Configure System and Enterprise Settings 24
Figure 32- Configure Network and Security Settings 25
Figure 33- Manage User Settings 26
Figure 34- Configure Event Log Setup 27
Figure 35- Manage a sensor- choose action 28
Figure 36- Monitor status of the "Undefined" external sensor 28
Figure 37- View History Graph 29
Figure 38- Change the appearance of your graph (temporary) 29
Figure 39- You can zoom your axes 30
Figure 40- Drag a selected area to zoom in on 30
Figure 41- Configure the "Undefined" external sensor 31
Figure 42- Alert 1- Indication in group 32
Figure 43- Alert 2- Indication of which UNIT 32
Figure 44- Alert 3- Indication of which sensor group 32
Figure 45- Alert 4- Indication of which sensor is in alert 33
Figure 46- Alert 5- See the alert status 33
Figure 47- Alert 6- Alert has been acknowledge-status normal 33
Figure 48- Login as root from Client 34
Figure 49- Manage Server from Client 34

INTRODUCTION

The ENVIROMUX-MNG is intuitive graphical software that provides an easy-to-use, unified interface for both monitoring and configuring up to 3,000 ENVIROMUX-SEMS-16, ENVIROMUX-SEMS-16U, ENVIROMUX-2D(REV C only), ENVIROMUX-5D, ENVIROMUX-16D and IPDU-S4/S8 units (UNITS) and all connected sensors. The software is split into two parts, the Server (to actively poll all UNITS for status information and alerts) and Client (to communicate with the Server from any location to read statuses and make configuration changes).

A License Activation Key controls how many UNITS can be monitored and configured through the Server, and a License Activation Key supporting up to 10, 50, 100, 500 or 3000 UNITS is available from **http://www.networktechinc.com/enviro-rems-gui.html**.

Features:

- Units may be monitored and configured individually or in a group.
- Display values and status for individual sensors or list of sensors.
- NTI will provide customer, without charge, copies of any appropriate updates/enhancements for 12 months. This software update service is optionally extendable every twelve months for 20% of the then current list price.
- Client/Server architecture
    - Server application actively polls all UNITS for status information as well as listens for alerts from all UNITS.
    - Client application communicates with the Server to read statuses and to deploy configuration changes.

Server and Client Requirements:

- Support Windows Vista/Windows 7/Windows 8/Windows 10/Server 2003/2008/2012, Solaris, Linux, FreeBSD, and MAC OS 10.5 or later.
- Requires Java Runtime Environment 1.6 or later.

Note: If Java Runtime Environment 1.8 or later is installed, the ENVIROMUX-xD units must be running firmware version 2.35 or later and the ENVIROMUX-SEMS-16 units will no longer be compatible with the ENVIROMUX-MNG.

To maintain compatibility with ENVIROMU-SEMS-16 units you must be running Java version 1.7 or earlier and ENVIROMUX-xD firmware version 2.34 or earlier.

- Requires firmware version 3.1 or later in ENVIROMUX-SEMS-16 units.
- Requires firmware version 1.2 or later in ENVIROMUX-16D units.
- Requires firmware version 2.0 or later in ENVIROMUX-5D units.
- Requires firmware version 2.3 or later in ENVIROMUX-2D units (REV C only (models with two power inputs)).
- Requires firmware version 1.3 or later in IPDU-S4/S8 units.

Below minimum requirements assume CPU with physical cores (rather than virtual) and an OS similar to MS Windows or Linux with minimal usage from other user applications.

Server Configuration:
1 - 20 UNITS, 1- 5 clients:
Minimum requirements: dual core CPU with 2 GB RAM 100 Mbps network
Recommended Configuration: Quad core CPU with 4 GB RAM 100 Mbps network

20 - 80 UNITS, 5 - 15 clients:
Minimum requirements: Quad core CPU, with 4 GB RAM 100 Mbps network
Recommended Configuration: 8 core CPU with 8GB RAM 100 Mbps network

80 - 300 UNITS, 10 - 25 clients:
Minimum requirements: 8 core CPU with 8GB RAM 100 Mbps network
Recommended Configuration: 12 core CPU with 16 GB RAM 1 Gbps network

300 - 700 UNITS, 15 - 35 clients:
Minimum requirements: 12 core CPU with 16 GB RAM 1 Gbps network
Recommended Configuration: 20 core CPU with 24 GB RAM 1 Gbps network

Client Configuration:
1 - 20 UNITS:
Minimum requirements: dual core CPU with 2 GB RAM 100 Mbps network
Recommended Configuration: Quad core CPU with 4 GB RAM 100 Mbps network

20 - 80 UNITS:
Minimum requirements: dual core CPU with 2 GB RAM 100 Mbps network
Recommended Configuration: Quad core CPU with 8 GB RAM 100 Mbps network

80 - 300 UNITS:
Minimum requirements: Quad core CPU with 8 GB RAM 100 Mbps network
Recommended Configuration: 8 core CPU with 16 GB RAM 1 Gbps network

300 - 700 UNITS:
Minimum requirements: 8 core CPU with 16 GB RAM 1 Gbps network
Recommended Configuration: 10 core CPU with 20 GB RAM 1 Gbps network

If installing over 700 UNITS to manage from a single machine, contact NTI for custom setup.

MATERIALS

Materials supplied with this package:
NTI ENVIROMUX-MNG ENVIROMUX Management Software including:

- mng-srvr-v*x-x*.zip file (for the management server) (vx-x = the version number)
- mng-clnt-v*x-x*.zip file (for client PCs) (vx-x = the version number)
- Adobe pdf file of this manual

LIMITATIONS

- UNITS must be individually connected to the LAN (**not cascaded**) in order for the ENVIROMUX-MNG to function.
- The Management Software:
  - cannot view logs
  - cannot simulate alerts
  - cannot change IP addresses of the UNITS
  - cannot save or restore individual UNIT configurations from within the management software
- The Server application is licensed to be applied to one CPU and will only work on the CPU with the Machine ID (MAC address) supplied at the time of license issue. To move the Server application to a different CPU, contact NTI to request an updated license.
- There is no limit to the number of Client applications that can be installed on CPUs to access the Server and connected UNITS.
- Multiple Server applications can monitor UNITS at the same time with no ill effects.
- There is no limit to the number of Clients that can access the Server at a time
- There is no limit in the program to the number of users that can be configured to use the Client to access the Server. The number of users configured will only be limited by the amount of memory in the server hosting the program.

INSTALLATION

The ENVIROMUX-MNG enables an administrator to manage multiple UNITS (up to 3,000) either from a central CPU acting as a server or from client CPUs. In order for a client CPU to manage UNITS, the client must have access to this server.

To install the Server software on a computer, unzip the `mng-srvr-vx-x.zip` file received via email to a directory where the software will run. (vx-x will be the version number of the software.)

TIP: At this time, you might want to place a shortcut on the desktop to run the semsmanagersrvr.jar file. (In Windows, right-click the .jar file, click "Send To", click "Desktop (create shortcut)".)

Note: Ensure that the server firewall allows TCP ports 9000, and 9001 access. If a UNIT is behind a firewall, ensure UDP port 161 and 162 (SNMP) and TCP port 6000 is accessible.

Note: SNMP must be enabled in each ENVIROMUX Unit monitored for the ENVIROMUX-MNG to receive and display sensor values.

The ENVIROMUX-MNG also enables any PC (with Java installed and with access to the Server) to additionally manage the ENVIROMUX units. The PC (Windows/Sun/Mac/Linux/etc) can access the Server via an Ethernet connection. These PCs will be referred to as "clients" throughout this manual.

To install the Client software on a computer, unzip the `mng-clnt-vx-x.zip` file received via email to a directory where the software will run. (vx-x will be the version number of the software.)

TIP: At this time, you might want to send a shortcut to the desktop to run the semsmanager.jar file. (In Windows, right-click the .jar file, click "Send To", click "Desktop (create shortcut)".)

Be sure that Java Runtime Environment 1.6 or later is installed on the server and each client. This software can be downloaded from http://java.com/en/download/manual.jsp.

Licensing

After installing the server software and Java Runtime Environment (version 1.6 or later), the Server software can be opened by double-clicking on the SemsManagerSrvr.jar file in the directory `mng-srvr-vx-x.zip` was unzipped to . When you start the `SemsManagerSrvr.jar` file the first time the End User License Agreement will be presented.

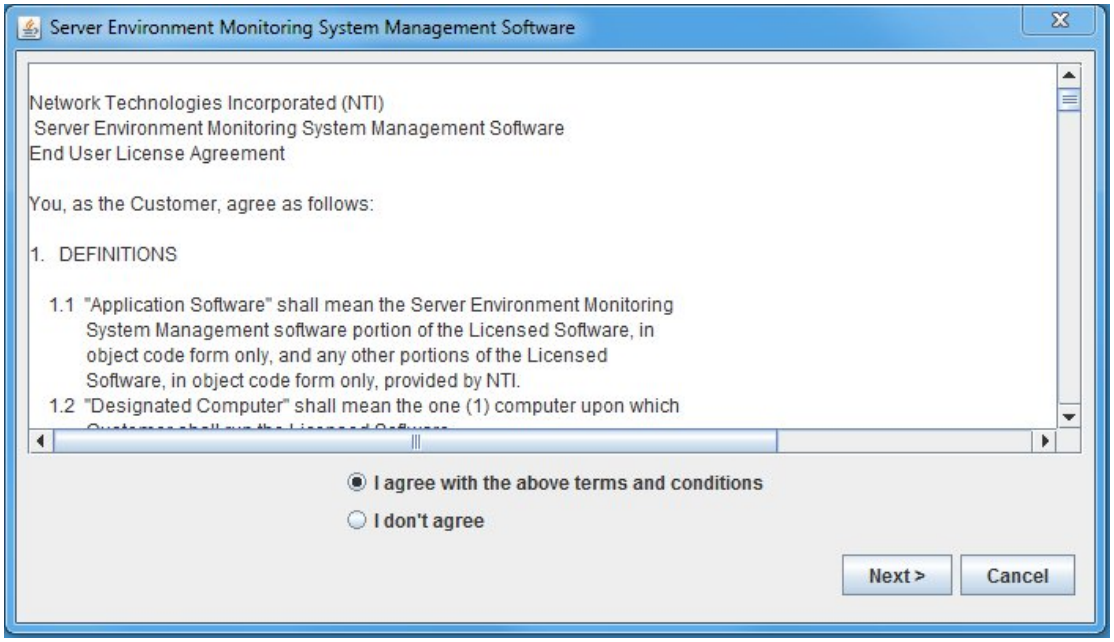

Figure 1- End User License Agreement

After reading the agreement, make sure "I agree with the above terms and conditions" has been selected and click on **Next**.

You will then be presented with a license installation screen.

Figure 2- License Installation screen

If you have not yet purchased the ENVIROMUX-MNG and are evaluating it, a temporary license to use it in conjunction with up to 10 ENVIROMUX units for 30 days can be automatically generated. After 30 days, the software will not work unless a valid permanent license is installed, or another temporary license can be generated, but all configuration settings will be lost. Only the purchase and installation of a permanent license will avoid losing your configuration.

For now, click on "Generate 30 days license" to access the ENVIROMUX-MNG menu.

Note: See "Deactivate User Account Control" on page 6 before generating a temporary or activating a permanent license.

To install a permanent license, you must have purchased the software and submitted for a license activation key. Upon purchasing the software, you will receive a confirmation email that includes a product serial number for the software purchase. That number, combined with the Machine ID of the computer the Server software is on, will be required to apply for the License Activation Key.

Note: It can take up to 3 business days after submitting your License Request Form to receive your License Activation Key.

Get Machine ID

With the Server software main menu now open, select "Help" and "Install License".

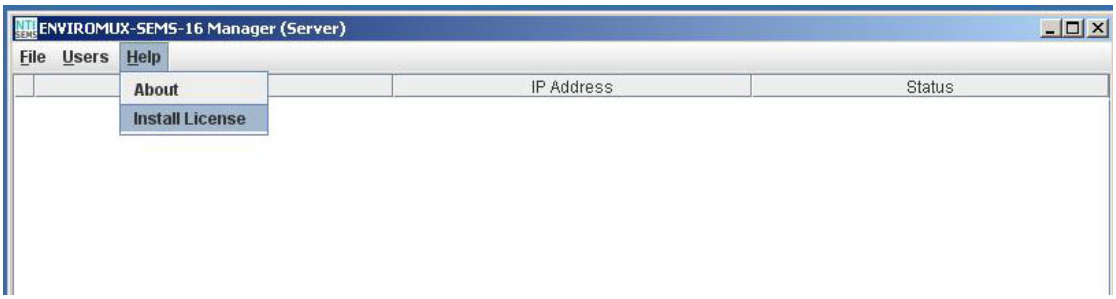

Figure 3- Server software-Install License tab

The following image will open:

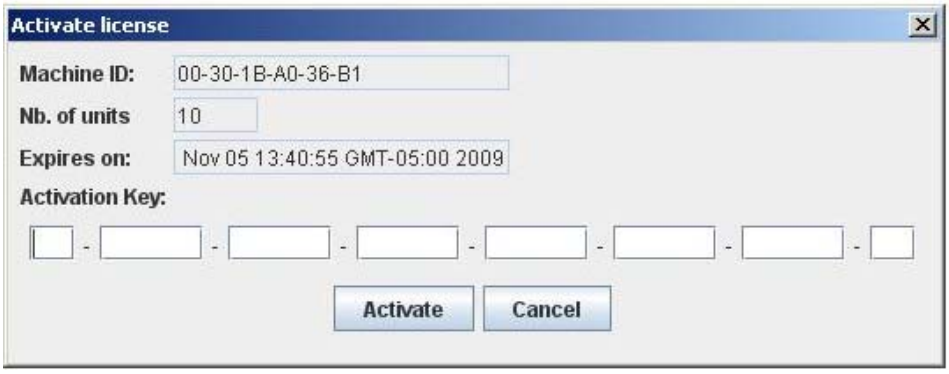

Figure 4- License Activation screen

The "Machine ID" of the computer is in the first line of the image (example above). Write this down exactly as shown and enter it on the Registration and License Request Form found at http://www.networktechinc.com/license-request-env.html .

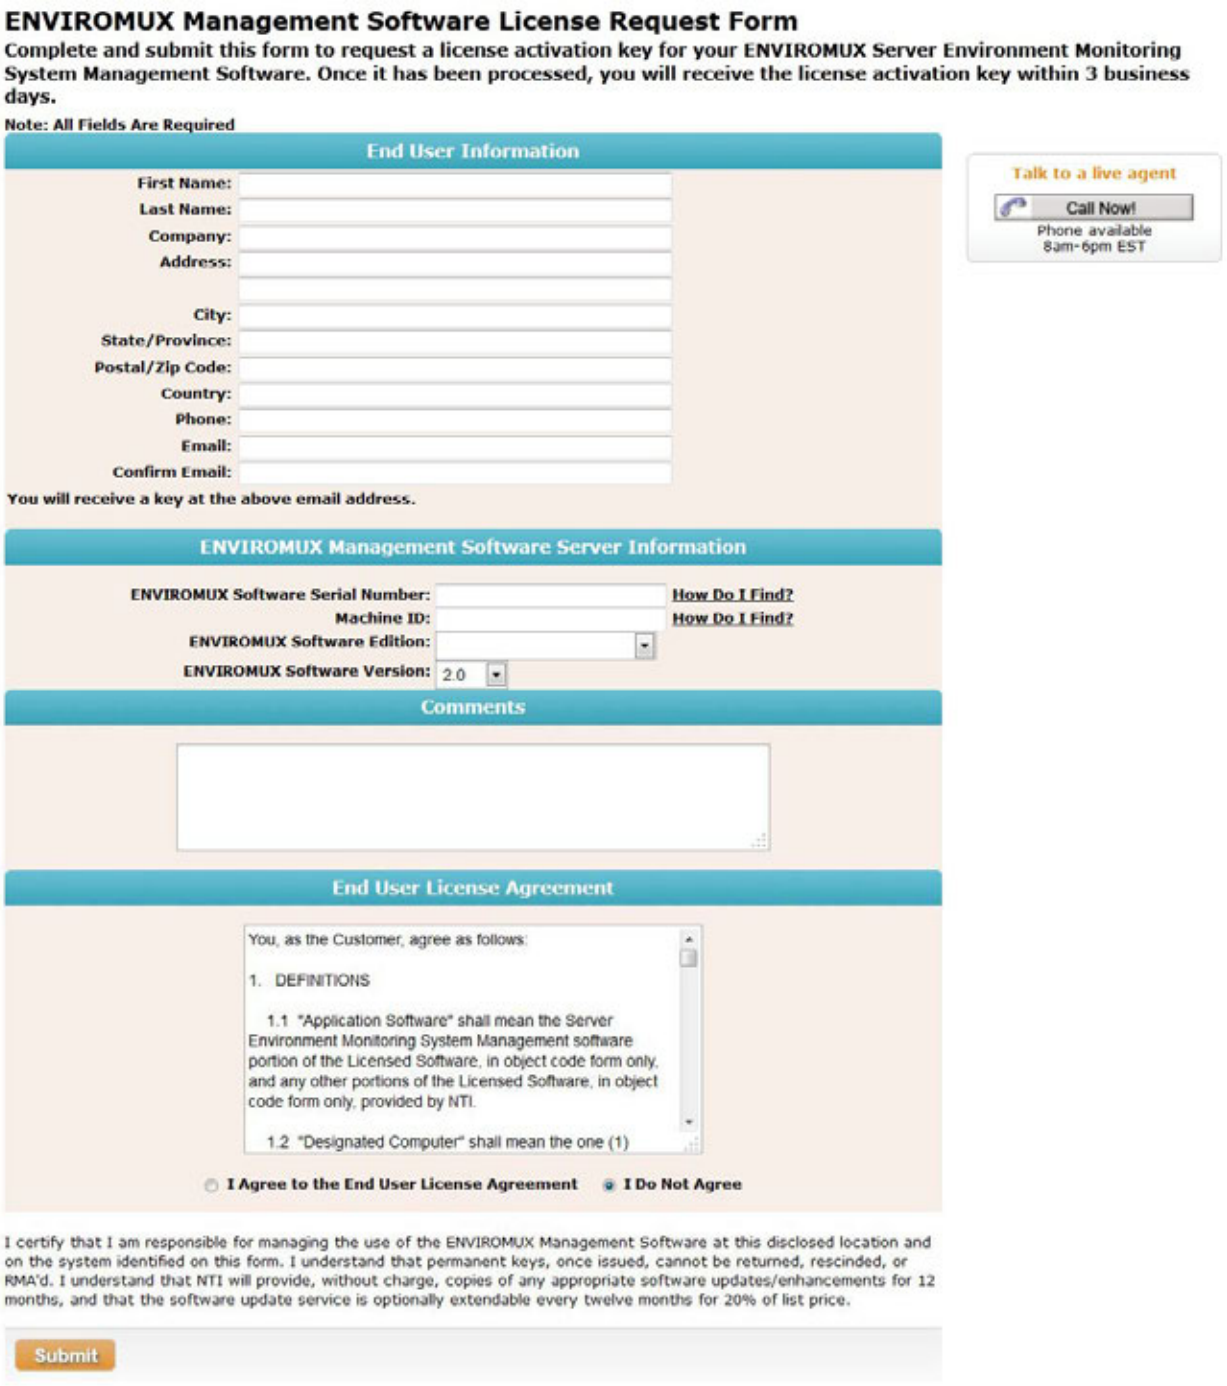

Figure 5- Registration and License Request Form

Install Permanent License

Within 3 business days, you will receive an email that includes a **License Activation Key**. Enter the key with the characters exactly as they are in the body of the email in the block provided in the "Activate License" screen (Figure 4).
With a proper entry of the License Activation Key, click on **Activate**. The ENVIROMUX-MNG software should now be ready to use.

NOTE: The Server application is licensed to be applied to one CPU and will only work on the CPU with the Machine ID supplied at the time of license issue. To move the Server application to a different CPU, contact NTI to request an updated license.

Deactivate User Account Control

In order to install the license (permanent or temporary) to your PC when running Windows 7 (or later) or Server 2008 (or later) you will need to temporarily deactivate User Account Control. Otherwise, the license will not be able to be written to your registry and each time the ENVIROMUX-MNG Server is restarted it will have to be re-configured.

To deactivate User Account Control:

- Go to Control Panel of the Windows Operating System
- Open User Accounts
- Click on "Change User Account Control Settings"
- Slide the button down to "Never notify".
- Click "OK"
- Reboot the PC for this to take effect.
- Activate the ENVIROMUX-MNG Management Software License

After activation you can change the account control setting back to their original settings.

To deactivate User Account Control in Windows 10, you must first enable the hidden administrator account. Then log into the Windows 10 PC as the "Administrator" (not just an administrative user). After deactivating User Account Control, remain logged in as "Administrator" and install the license.

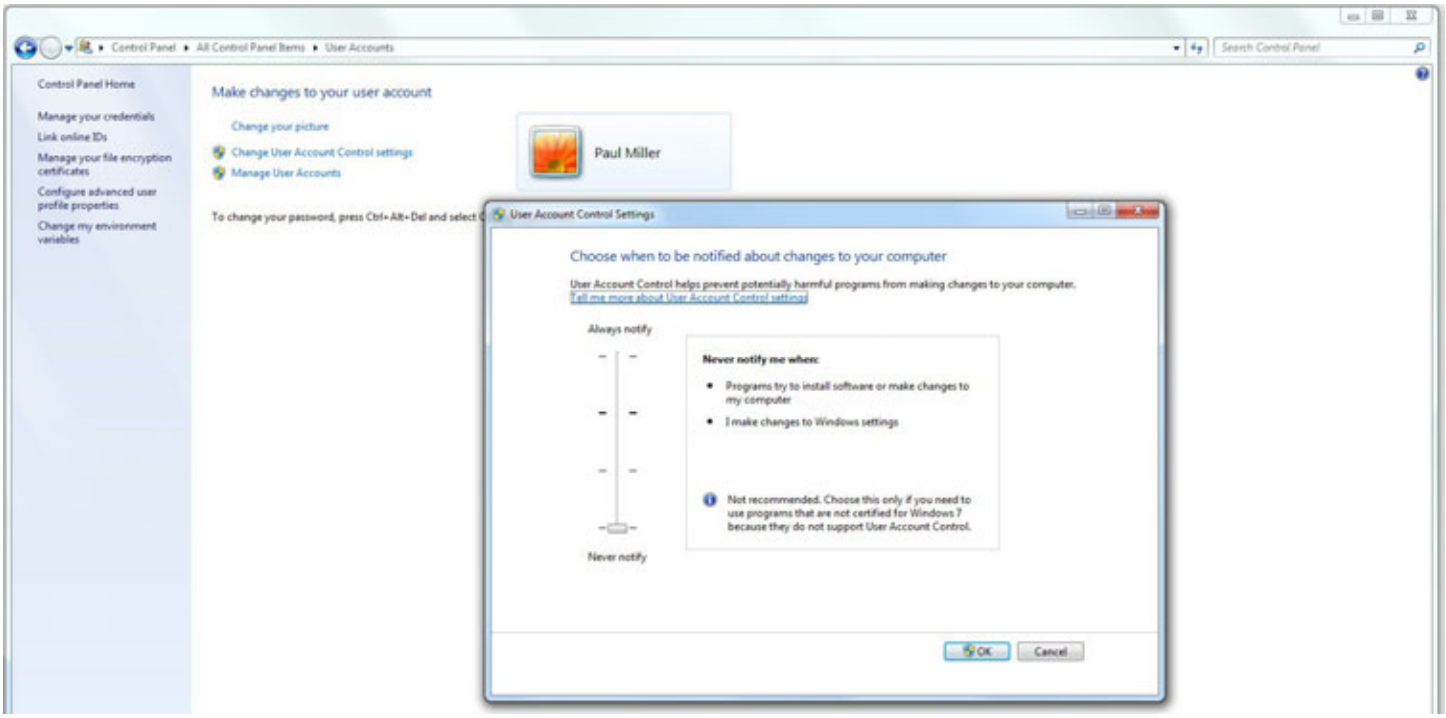

From the Command Line

If the Server software is unzipped to a CPU that operates strictly from the command line, then the following commands will provide access to the Server in that environment :

From the directory the Server software has been extracted to type:

```
C:\ENVIROMUX-MNG>java -jar SemsManagerSrvr.jar root admin -config
```

You will be prompted to accept the terms and conditions, type **Y** and press <**Enter**>:

```
Do you agree with above terms and conditions? (y or n): y
A valid license key was not found on your system!

Select an option:
   Generate 30 days license    <1>
   Install permanent license   <2>
   Cancel                      <3>
> 1
```

The software will check for a license key.

- If you already have one, enter <**2**> to be prompted to enter it and simply copy and paste the key from the email message it was received on, or carefully type the key in.
- If you don't have a license key, enter <**1**> to generate a temporary 30 day license.

Note: The terms and conditions will only be displayed until a temporary license is generated or a permanent license is installed. After that, only the license status and command prompt (below) will follow the initial command to open the program.

Once the license is entered, the command prompt will be ready to receive control commands to configure the server. To see a list of commands the server will accept, type <**help**>.

```
C:\ENVIROMUX-MNG>java -jar SemsManagerSrvr.jar root admin -config
Nb of allowed Enviromux units: 10
Expires on: Sat Dec 29 16:57:10 EST 2012
Type 'help' to view available commands
>
```

For more on server management from the command line and a list of commands, see page 13.

Start the Server, Configuration is Done

To start the ENVIRMUX-MNG server without going into the configuration mode, type the following at the command prompt:

```
C:\ENVIROMUX-MNG>java -jar SemsManagerSrvr.jar root admin –nogui
```

Note: If you have changed the root user password, substitute the new password for "admin" in the string above.

To stop the server, terminate the program using a command appropriate for your operating system (<**Ctrl+c**> for DOS, <**kill**> for Linux, etc).

SERVER MANAGEMENT

Manage From the GUI (Graphical User Interface)

Immediately after installing the license, and any time hereafter that you double-click on the `semsmanagersrvr.jar` file, the server management software will open to the login screen. The administrator is named "**root**", and the root user will be prompted for a password.

The default password is "**admin**".

Only the "root" user can access the "Server" side of the management software.

Note: If the root user password has been changed and this installation is an update (rather than a new installation), the previous root password will not be changed with the updated software installation.

Figure 6- Login to server

The software will open to an empty list that will contain all connected UNITS to be monitored by the ENVIROMUX-MNG. UNITS are easily added using IP address, or DNS name (if so configured).

Note: The server will offer to update the root password of any UNIT that has a root password other than "admin". Otherwise, these units will require a separate login when the server software is started.

Add UNITs to Monitor

To add a UNIT, click on the "File" menu and select "Add Unit". A window will open as shown below.

Enter the IP address for the UNIT or the DNS name (if applicable) and press "Add". If the IP address is valid, the UNIT will appear in the server list. If not, the message "cannot find unit" will be displayed below the "Add" and "Done" buttons. When finished adding UNITs, click the "Done" button to close the window.

TIP: If you don't know the IP addresses of the UNITS to be monitored, you can use the included NTI Discovery Tool (page 10) to identify them (provided they are all connected to the same LAN).

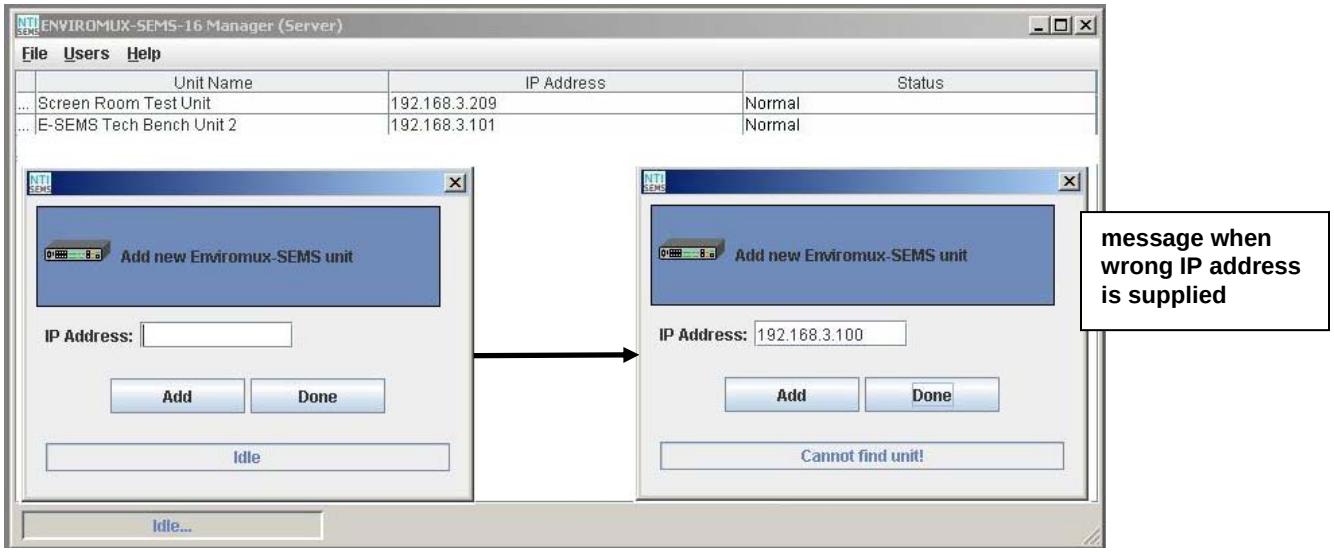

Figure 7- Add UNITS to monitor

Device Discovery Tool

In order to easily locate the UNIT on a network, the NTI Device Discovery Tool may be used. A link to the Discovery Tool is provided on the web page that appears when you insert the instruction manual CD provided into your CD ROM drive. Click on the link or browse the CD and click on the file *discover.html* . This will open your browser and display the Device Discovery Tool page.

Note: The Device Discovery Tool requires the Java Runtime Environment to operate.

Note: The computer using the Device Discovery Tool and the ENVIROMUX must be connected to the same physical network in order for the Device Discovery Tool to work.

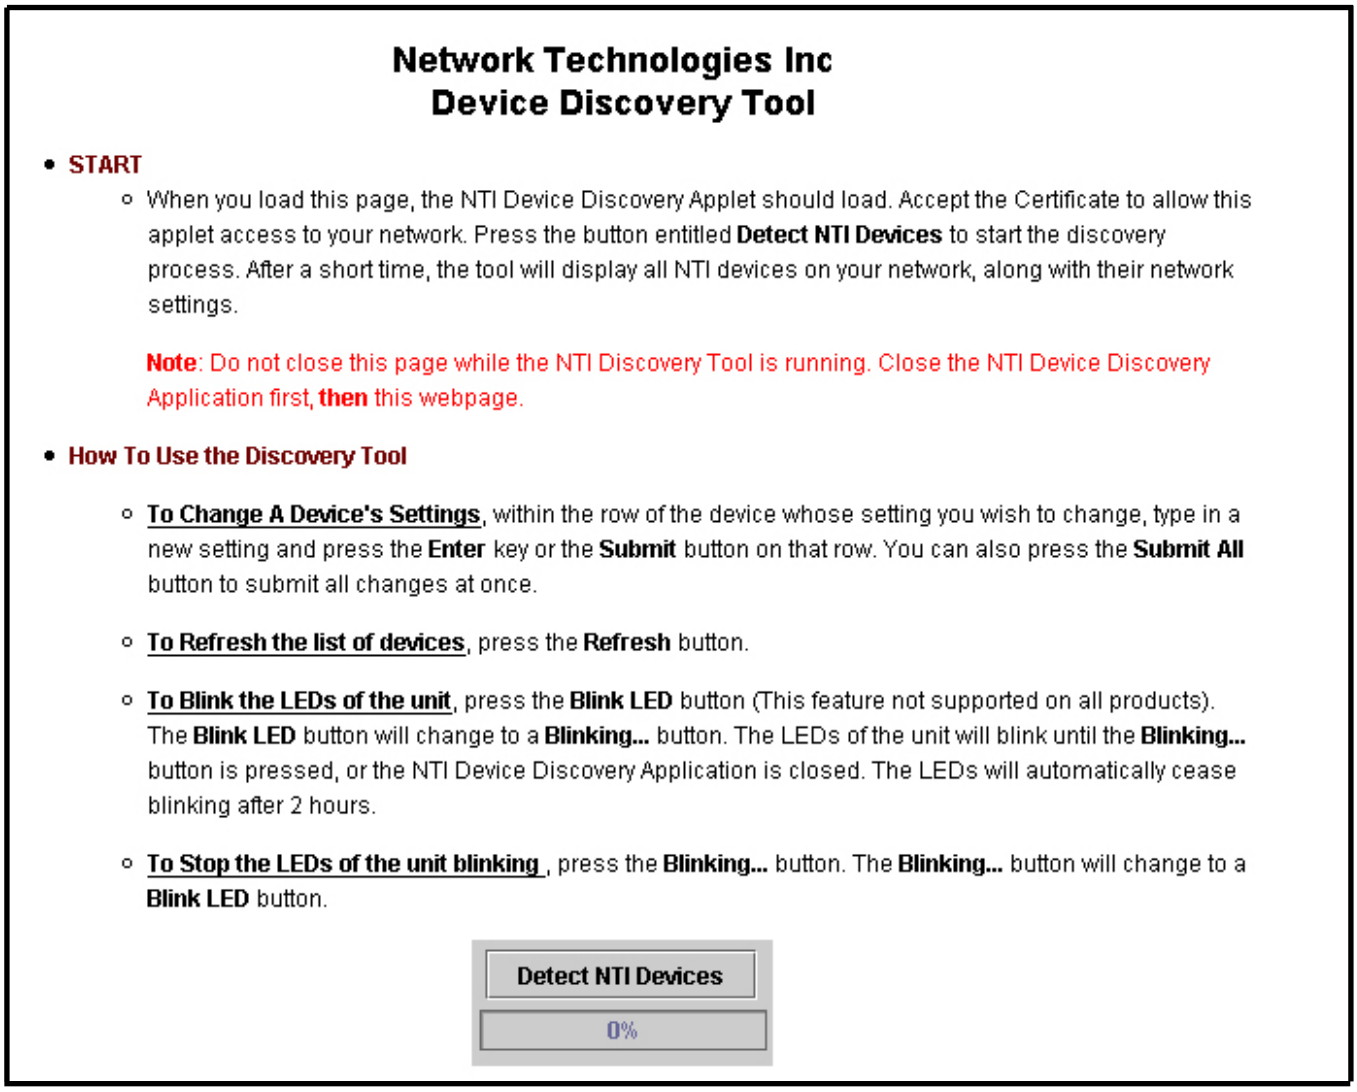

Figure 8- Device Discovery Tool page

Use the Device Discovery Tool to display all NTI ENVIROMUX units on the network, along with their network settings. Follow the instructions on the Device Discovery Tool page to use the tool and to change the device settings if so desired.

Add ENVIROMUX-MNG Users

The administrator can add Users (as many as desired) that can access the MS and manage monitored UNITs. The list of users is saved in the server but can be configured from any client location. The "root" user can add users, define passwords, and assign administrator rights to a user if so desired. Only listed users will have access to the ENVIROMUX-MNG.

Users with administrative rights are able to manage users in the individual UNITs, allowing them to add, edit, and delete users, as well as change passwords.

To add a user, click on the "Users" menu item and select "Create New User". A window (see Figure 9) will open to define a User Name and Password. Place a checkmark in the box next to "Administrative Rights" if you want this user to have control has described above.

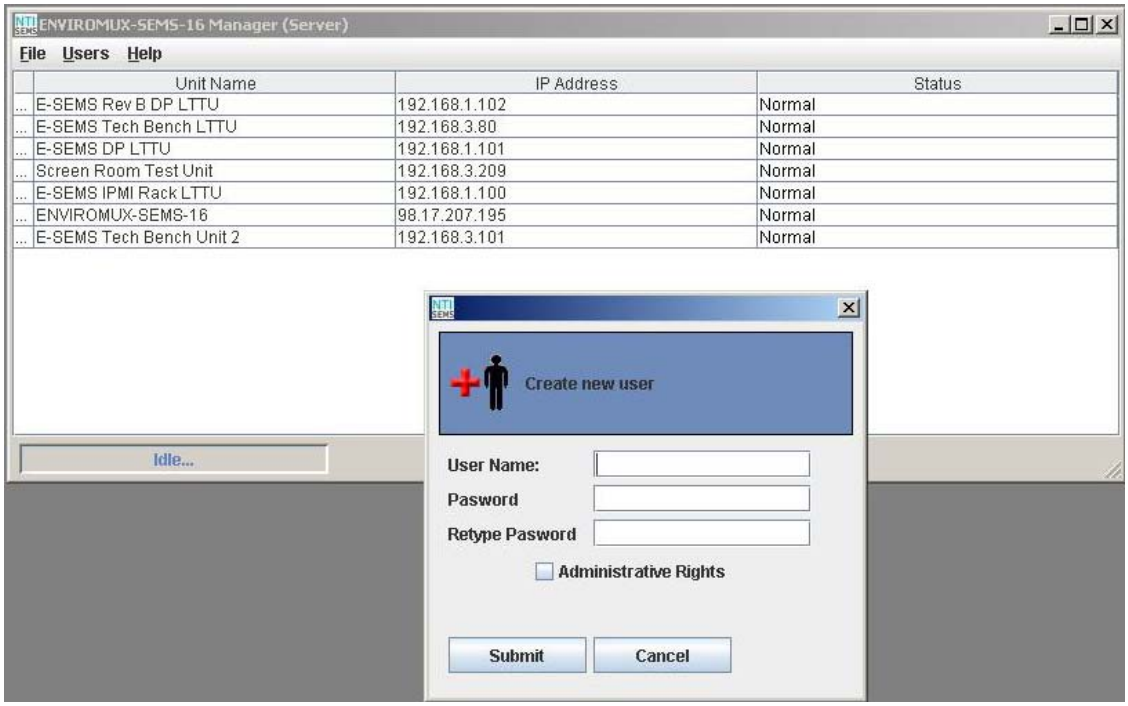

Figure 9- Create new user

Edit ENVIROMUX-MNG Users

The root user or users with administrative rights can make changes to a user's password and change their status as an administrator. Simply click on the "Users" menu and select "Edit User". A window will open where the desired user can be selected and boxes are available to change user settings or delete a user (see Figure 10).

After making changes, press "Submit Changes" to have them take effect.

After all changes are complete, press "Done" to exit the window.

To delete a user, select the User name from the list and press "Delete".

Note: A password must be provided, even if it is only 1 character.

Figure 10- Edit User

UNIT Loses Connection

If a UNIT loses connection to the network, whether via power failure or Ethernet, the ENVIROMUX-MNG will indicate it.

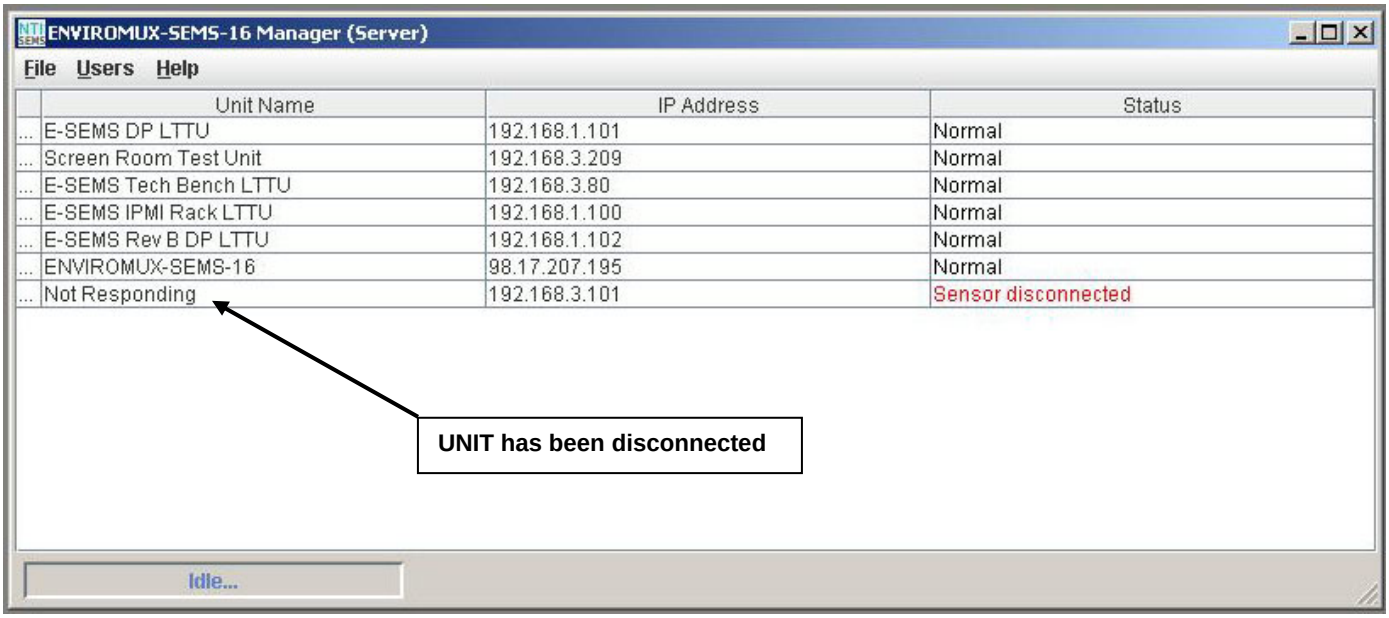

Figure 11- UNIT has lost connection to network

With the power or Ethernet connection restored, the software can be prompted to quickly reload the UNIT and restore sensing and management. Simply right-click (with the mouse) on the client IP address and be prompted to either “Reload” the UNIT or “Delete” it from the list.

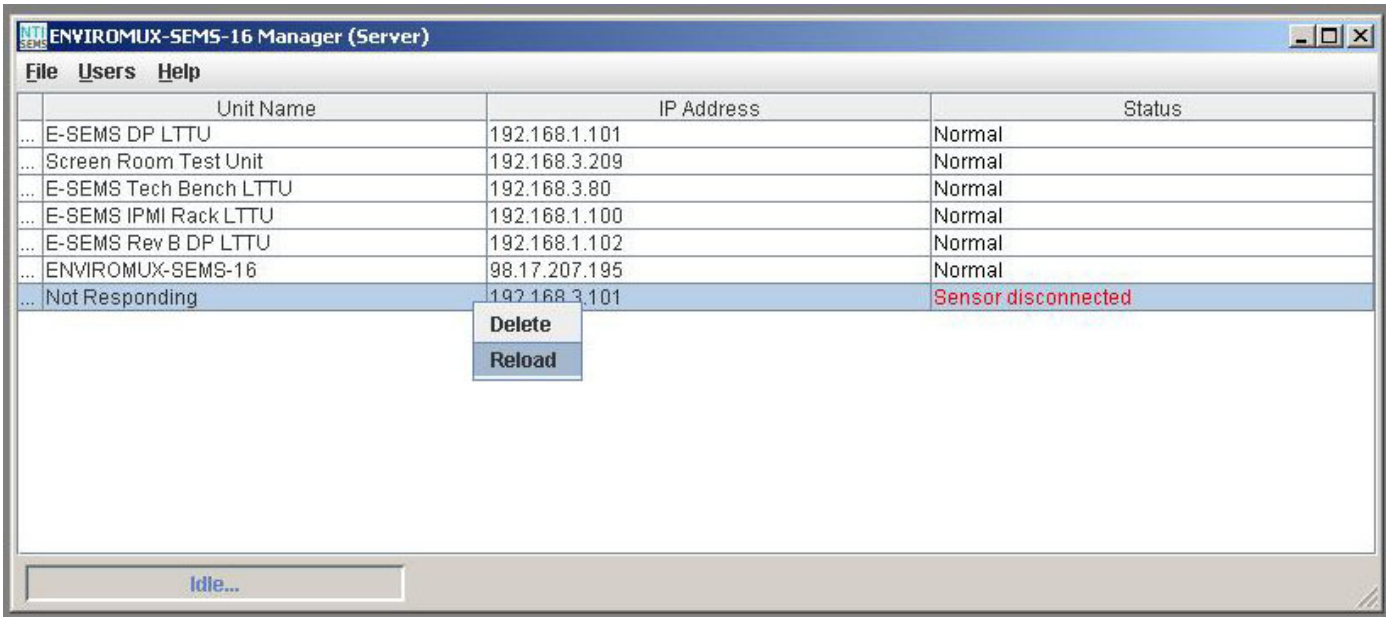

Figure 12- Reload UNIT to restore sensing and management

Manage From the Command Line

To control the ENVIROMUX-MNG Server from the command line, enter the following command from the directory the server files have been unzipped to:

```
C:\ENVIROMUX-MNG>java -jar SemsManagerSrvr.jar root admin –config

Nb of allowed Enviromux units: 10
Expires on: Sat Dec 29 16:57:10 EST 2012
Type 'help' to view available commands
```

Type <**help**> to view the available commands.

```
>help
    showid                    - Displays the machine ID for licensing
    license <license_string>  - Install license
    del_license               - Remove current license
    passwd                    - Change root password
    listunits                 - Lists the Enviromux units in the project
    addunit <IPAddress>       - Add an Enviromux unit with IP address
    delunit <IPAddress>       - Delete an Enviromux unit with IP address
    listusers                 - Lists the available users
    adduser                   - Add a user account
    deluser                   - Delete a user account
    run                       - Exit config mode and start the server
    exit                      - Exit
```

If you have not yet applied for a permanent license, you will need to get the Machine ID for the License Request Form (page 6). Enter the command <**showid**> to see the machine ID.

```
>showid
00-0C-29-8D-43-09
```

Write down the number presented for entry into the License Request Form.

Once you receive the license, enter the command <license> and the license string provided by NTI.

```
>license <license_string>
```

If, at some point, the ENVIROMUX-MNG Server is moved to a different CPU, the license will need to be updated to work with the new CPU. To first delete the license from the initial server, enter the command <**del_license**>.

Once the server is configured using the other commands to view, add, or remove ENVIROMUX Units to be managed and view, add, or remove users to have client access, either enter <**run**> to start the server, or <**exit**> to exit the configuration program.

To start the server without entering the configuration program, enter the following command (substitute current password for "admin" as applicable):

```
C:\ENVIROMUX-MNG>java -jar SemsManagerSrvr.jar root admin –nogui

Nb of allowed Enviromux units: 10
Expires on: Sat Dec 29 16:57:10 EST 2012
Server started
```

To stop the server, terminate the program using a command appropriate for your operating system (<**Ctrl+c**> for DOS, <**kill**> for Linux, etc).

USING A CLIENT

With users and passwords assigned, a user can access the ENVIROMUX-MNG Management Software from any computer with the Client software loaded, provided the user has access to the computer the Server software is on. There is no limit to the number of Clients that can access the Server at a time and there is no limit to the number of users that can be configured to use the Client to access the Server.

User Connection

After installing the Client software and Java Runtime Environment (version 1.6 or later), the Client software can be opened by double-clicking on the `SemsManager.jar` file (in the directory `mng-clnt-vx-x.zip` was unzipped to). A login screen will appear. Enter the IP address of the server, a valid user name (**other than root**) and password and the manager screen will open.

If you enter user name "root" and the password for "root", an administrative screen will open enabling the management of server settings. See page 34 for more about this.

Note: The client software will remember the last IP address entered, so this may not need to be repeatedly entered with each login unless the IP address of the server changes.

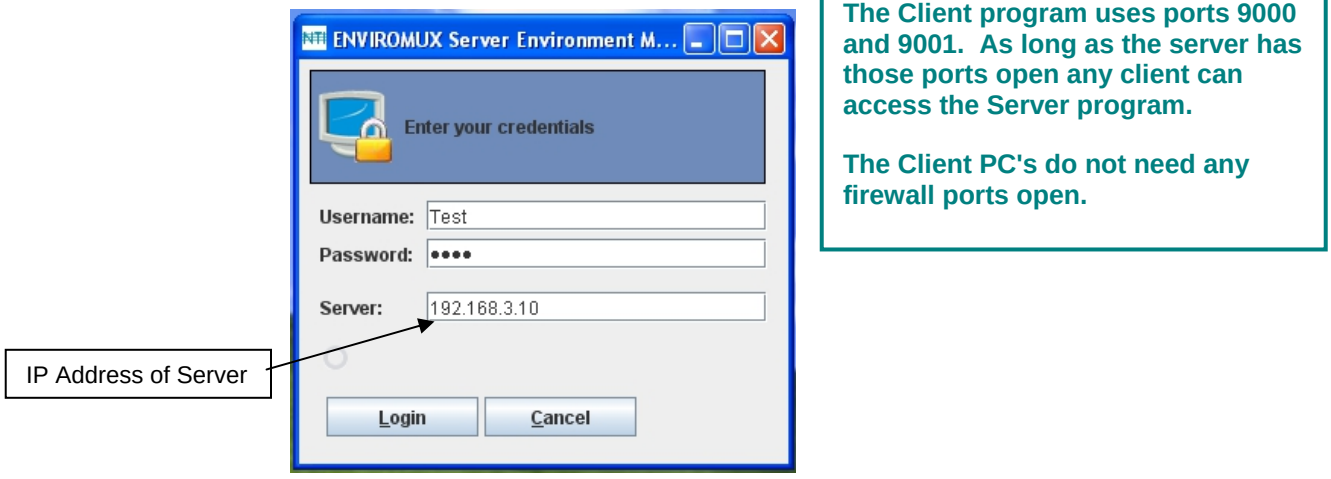

Figure 13- Login at a Client

The Client software will open to a blank window, wherein the user can create "Projects" that include groups of specific UNITs that are to be monitored. Each user can create unique projects used to monitor all available UNITs, or just a portion of them.

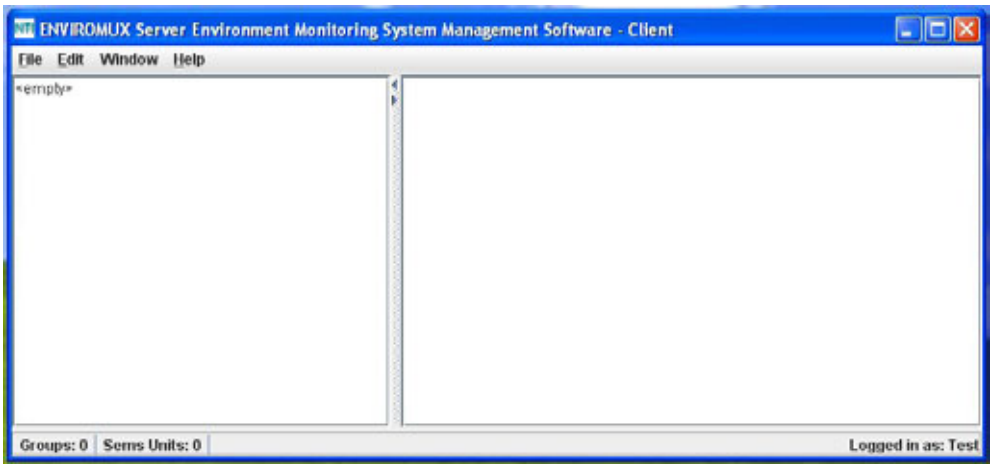

Figure 14- Empty list- no Projects defined yet

Project Management

Each user can monitor any or all connected UNITs. A project is made up of UNITs placed into a single group or can be broken up into category-specific groups for more organized monitoring. Any or all UNITs can be placed into each group. Once they are defined, the list of groups and their included UNITs can be saved as named projects for easy recall later. Multiple projects can be defined for each user. From the "File" menu, a user can create a new project, open and existing project, or delete existing projects.

Create a Project

To create a new project go to the "File menu" and select "New Project". The word "<empty>"will be replaced by "New Project".

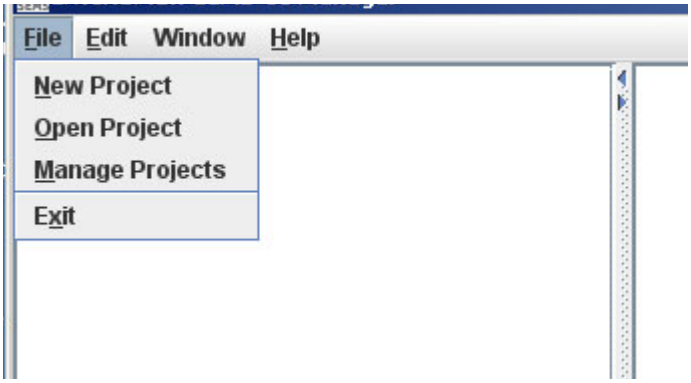

Figure 15- File Menu choices

With the project "New Project" highlighted, go to "Edit" menu and select "Project Settings". A project window will open.
FYI: The "Project Settings" selection is also used to edit an existing project.

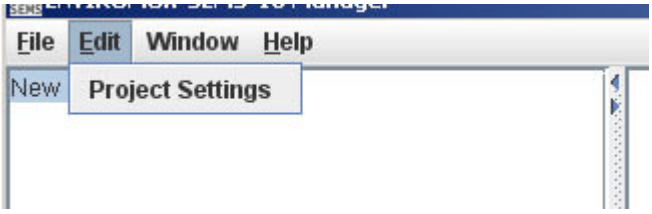

Figure 16- Select Project Settings

From the project window, click on the “New Group” button to add a group number under “New Project”. Then click on the group name to select it.
Select each UNIT from the list of “Available ENVIROMUX units” list that should be included in this group. With the UNITs selected either:

- click on “Save” to save the project, then “Cancel” to exit the project window,
- click on “New Group” to define another group of UNITs,
- or just click “Cancel” to cancel the action, save nothing, and return to the empty “New Project” window.

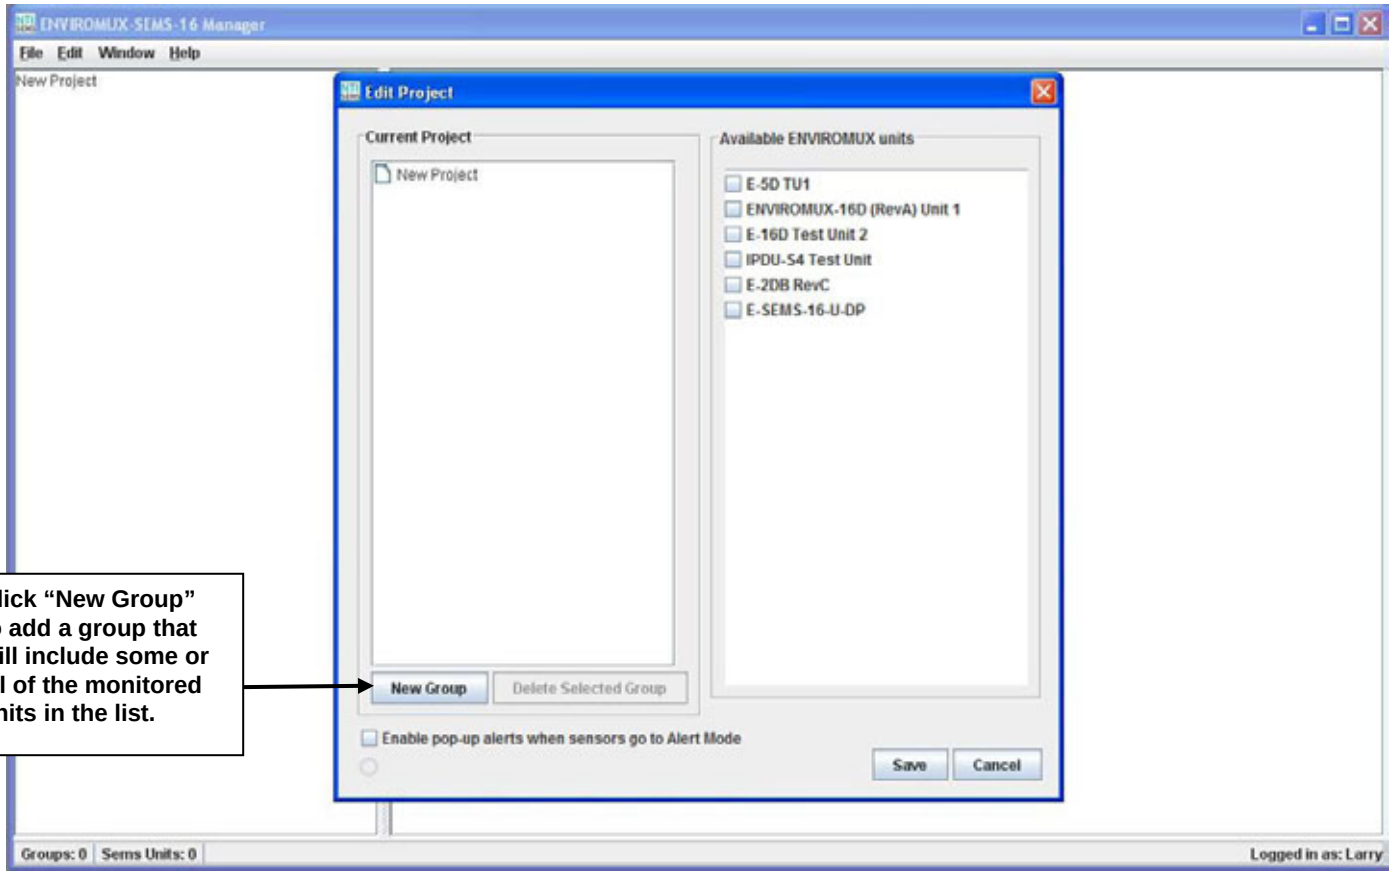

Figure 17- Define a new project

A unique name can be assigned to the Project.

To change the Project name double-click on the name and type the new Project name.

Press <**Enter**> to save it, or <**Esc**> to cancel.

Perform the same steps to change Group names.

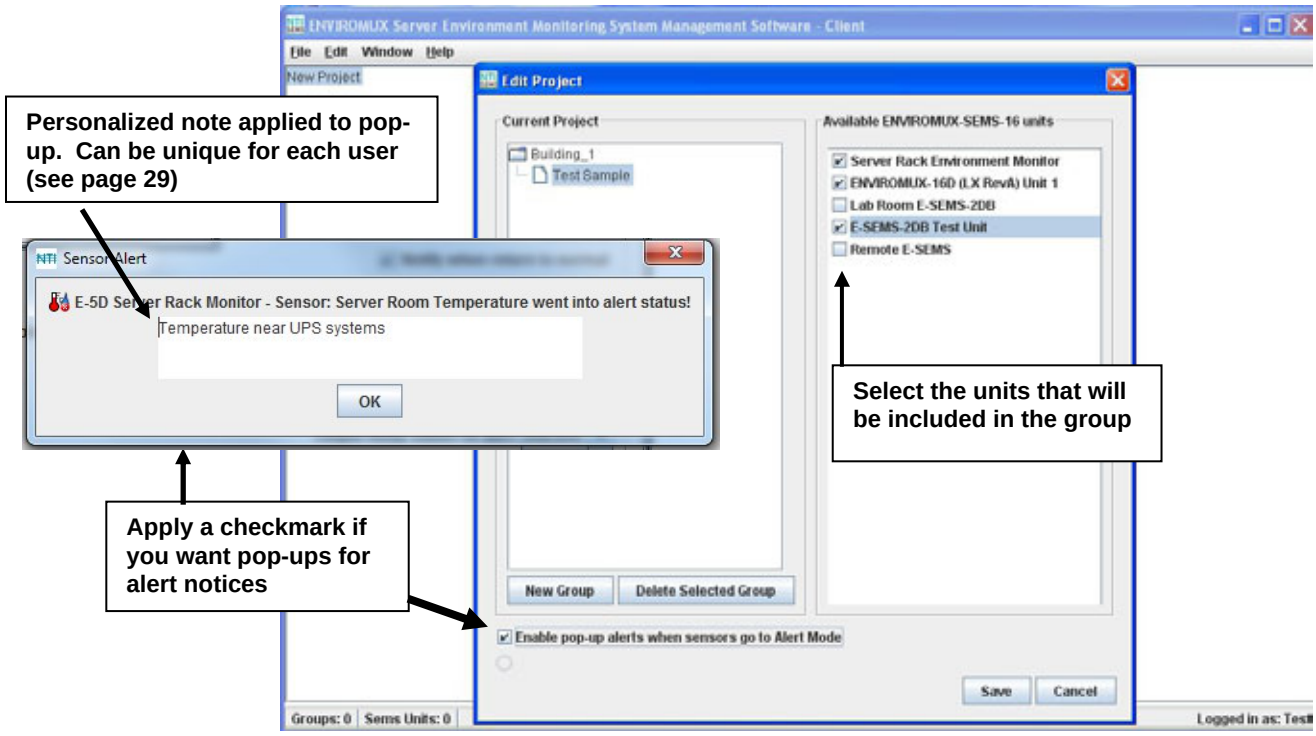

Figure 18- Change names of project and groups

If you apply a checkmark to the "Enable pop-up alerts when sensors go to Alert Mode" box, then any sensor that calls for an alert will cause a pop-up on your computer screen and an audible indication as long as you are logged-into the client software.

With the project settings defined, and groups defined, click on the group names to see the UNITs selected listed below each (Figure 19).

Notice, below, that some UNITs in one group are also in the other. A UNIT can belong to as many groups as desired.

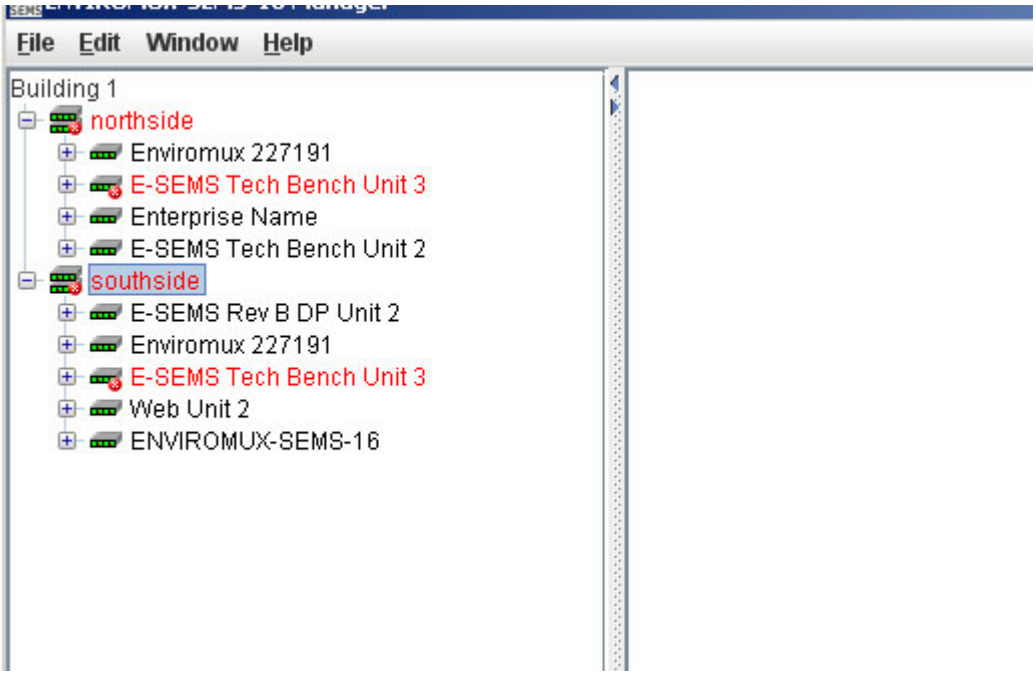

Figure 19- Project and groups exploded to view UNITs

1. Select a UNIT to view the sensor category list.
2. Select a category to see the sensors in that category.
3. Select a sensor to see the status of that sensor.

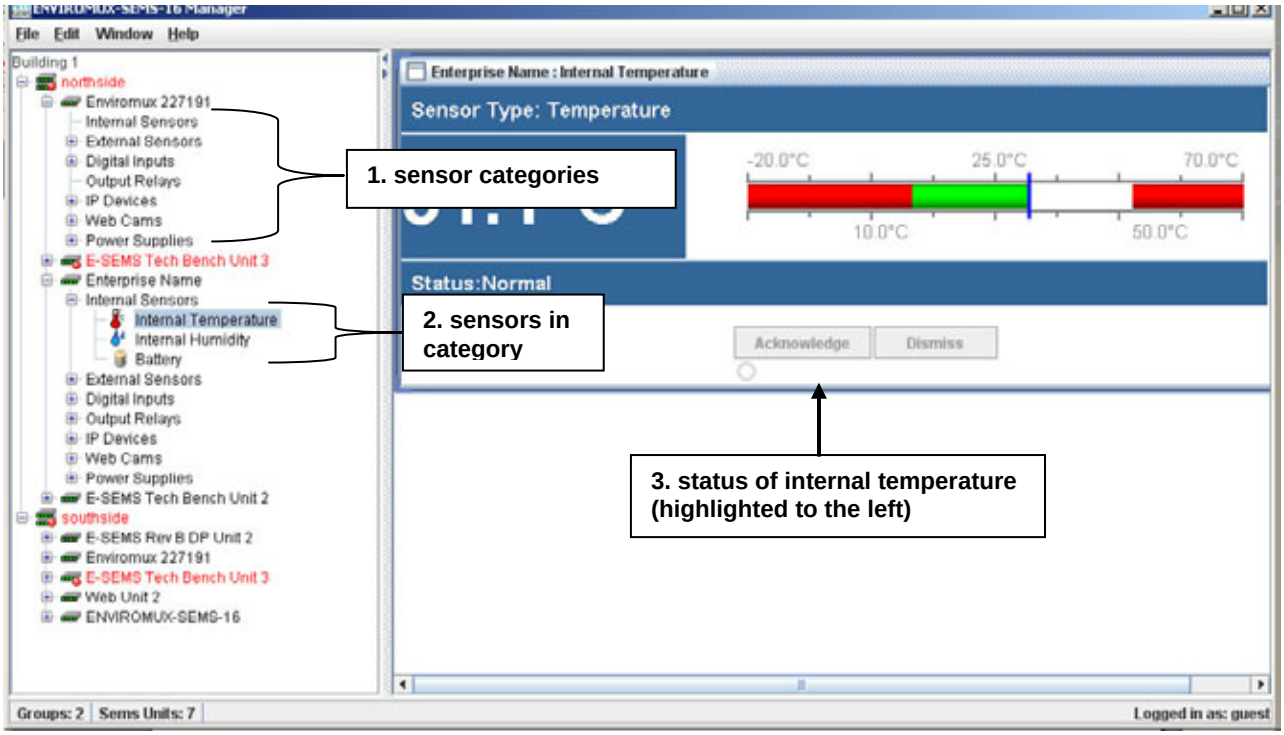

Figure 20- Exploded view of ENVIROMUX-MNG

Open a Project

In the image below, rather than creating a new project and re-selecting UNITs to be monitored, the user will open the "Guest View" project, a previously created project that contains all the UNITs the user wants to monitor.

1. Go to the "File" menu and select "Open Project".

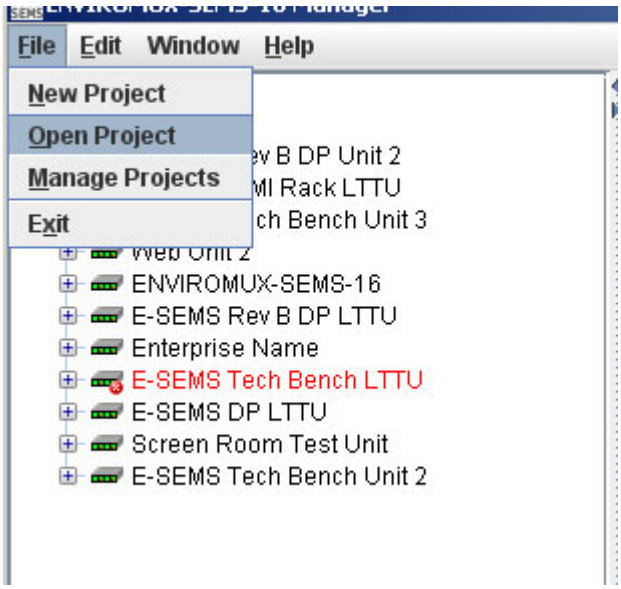

Figure 21- Open existing project

2. A list of existing projects previously defined will appear. Select the one desired and click “Open”.

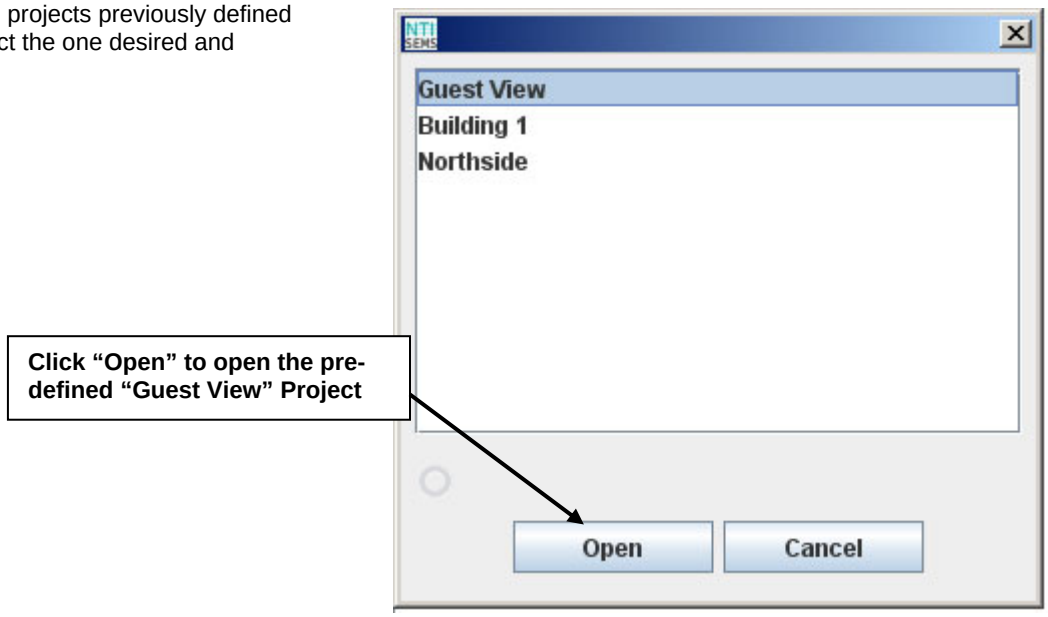

Figure 22- List of existing projects

3. The selected project is now open and ready to review.

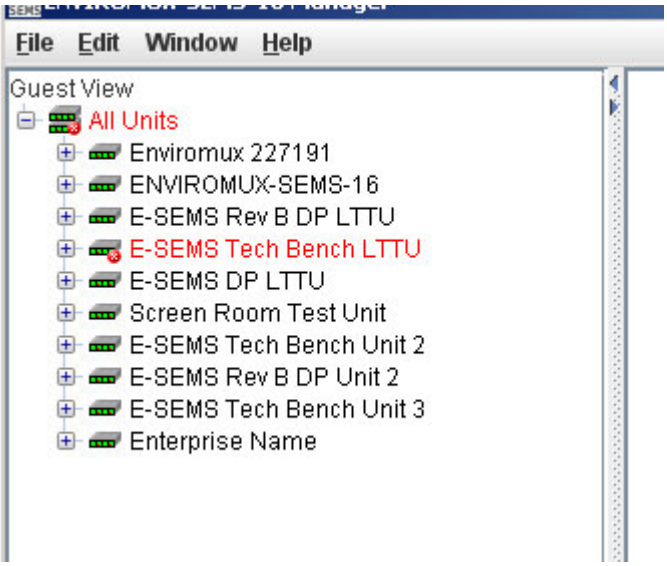

Figure 23- Existing project open, ready for viewing

Delete a Project

To delete a project, select “Manage Projects” (Figure 21) from the “File” menu. Select the project name to remove and click the “Delete”: button. That project and any groups defined within it will be removed from the projects list.

FYI: The user can also open an existing project from the Manage Projects window, if desired.

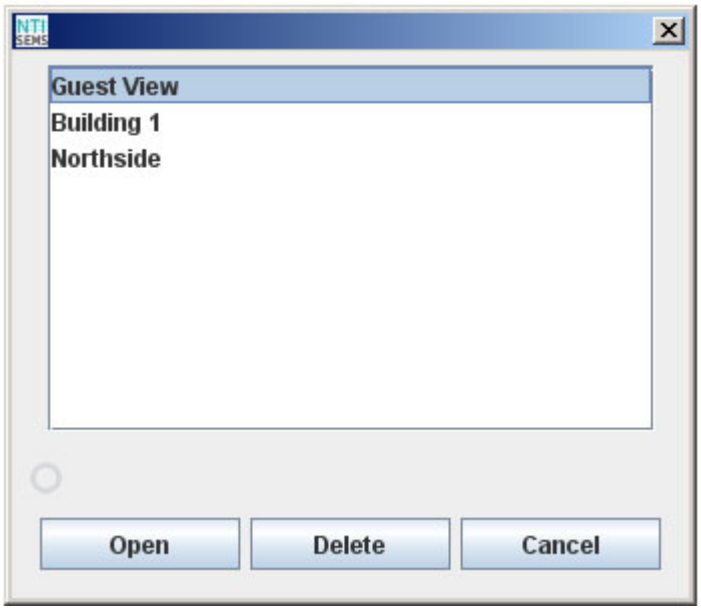

Figure 24- Deleting a project

Remote UNIT Management

From the ENVIROMUX-MNG manager, the user can perform many UNIT management functions that otherwise can only be performed when connected to the individual UNIT through the web interface.
To open a menu for making configuration changes to a UNIT, right click the UNIT name in the list. From here, the following areas of a monitored UNIT can be managed:

- **View summary**- to view a summary status of all connected sensors
- **View scrolling summary**- to view a scrolling summary with a controlled window size of all or select categories of connected sensors
- **Configure System**- Fields for entering the time and date, language, and the LCD monitor settings for the UNIT being managed
- **Configure Enterprise**- Fields for assigning the company name, address, contact person and phone number, and the UNIT e-mail address.
- **Configure Network**- Fields for providing all the network settings
- **Configure Security**- Apply SNMP agent settings
- **Users**- Add and edit all user settings including passwords (available to users with administrative privileges only)
- **Configure Log**- Define how log capacity will be handled and how user will be alerted as it becomes full

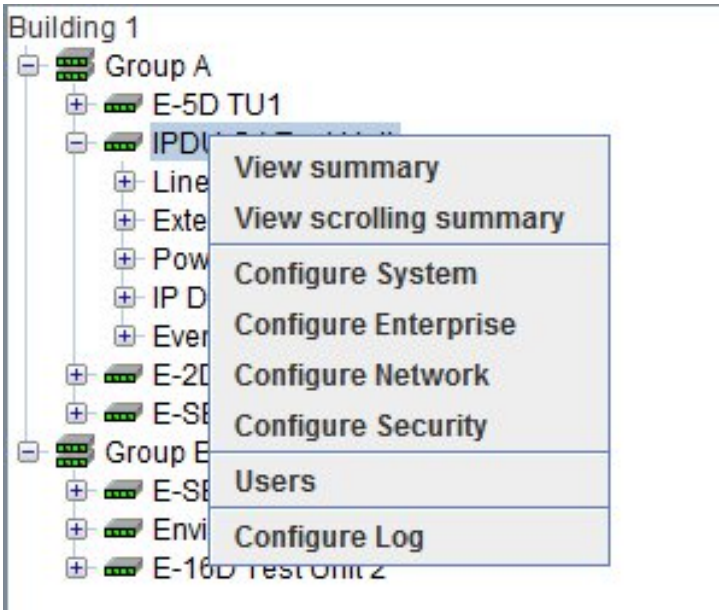

Figure 25- Options with right click on UNIT

View Summary

With the UNIT selected, right click and select “View Summary” to see a summary view of the status of all sensors connected to a UNIT.

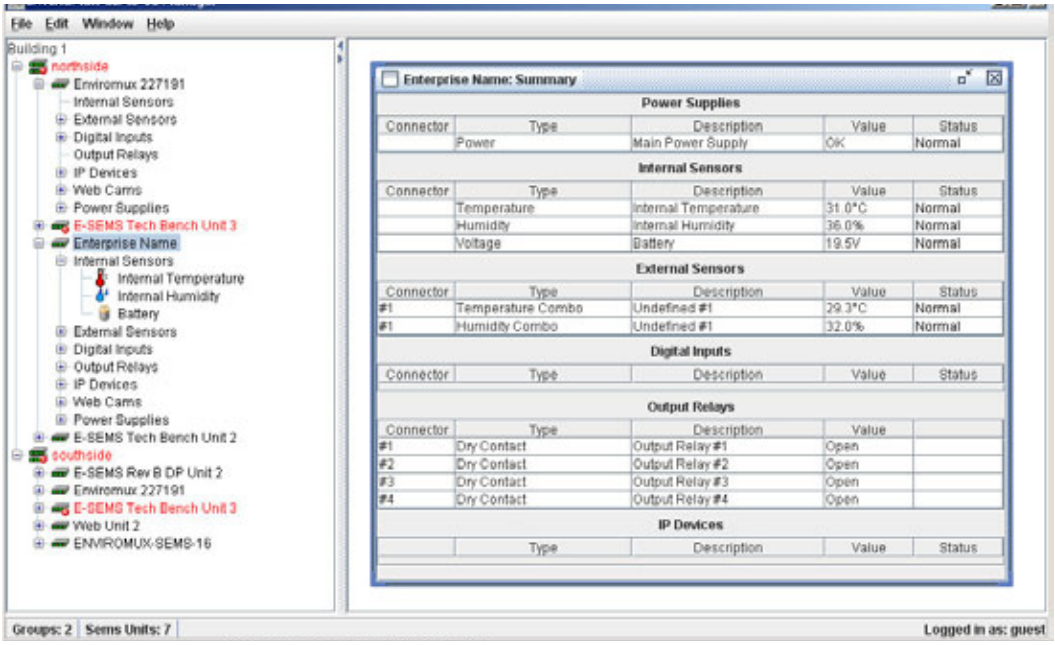

Figure 26- Summary view of sensors in a UNIT

If desired, the Summary view for each unit can be opened for easy monitoring. They can be arranged in a “Cascade” view, like in Figure 27, or in “Tile “ view, like in Figure 28. Simply select the summary view for each UNIT to be displayed, then select the view method. The view methods of “Cascade” or “Tile” are found under the “Window” menu.

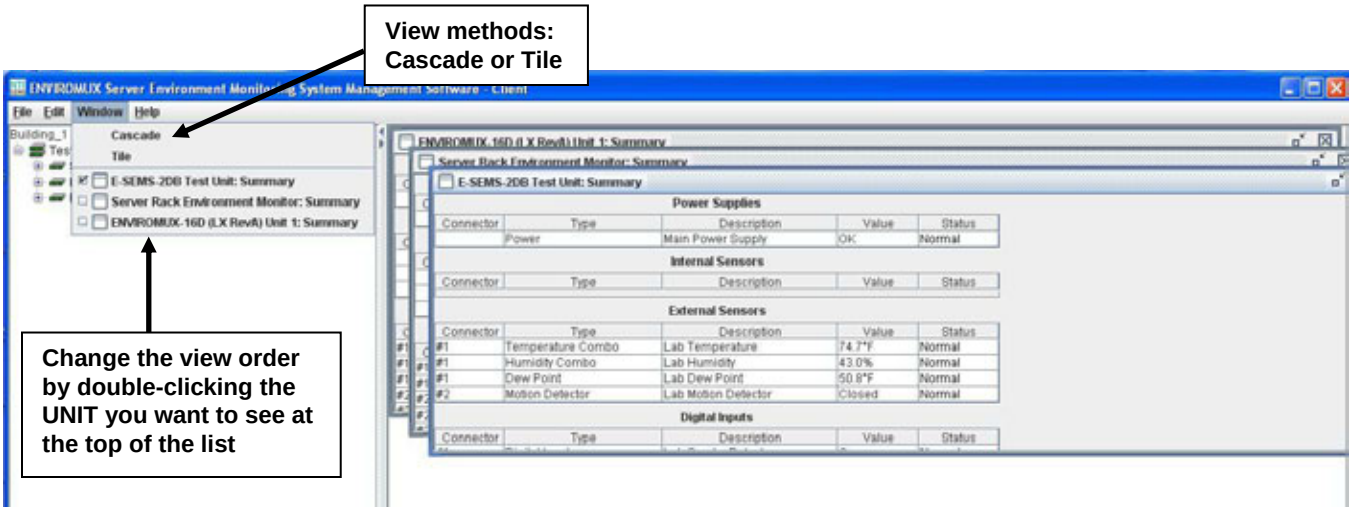

Figure 27- View multiple summary pages in Cascade View

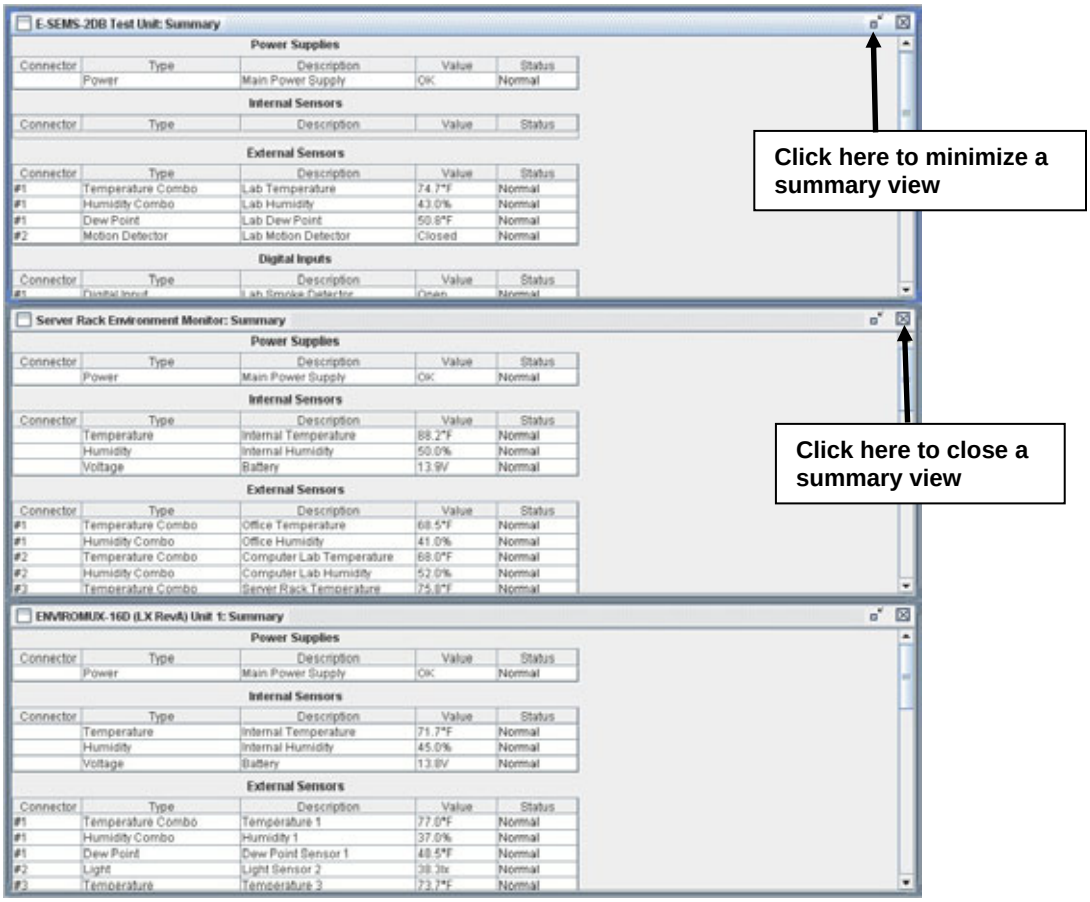

Figure 28- View summary pages in Tile View

View Scrolling Summary

The scrolling summary provides a more controlled way to limit the amount of screen space used for summary view and to view only those sensors that you want to keep on.

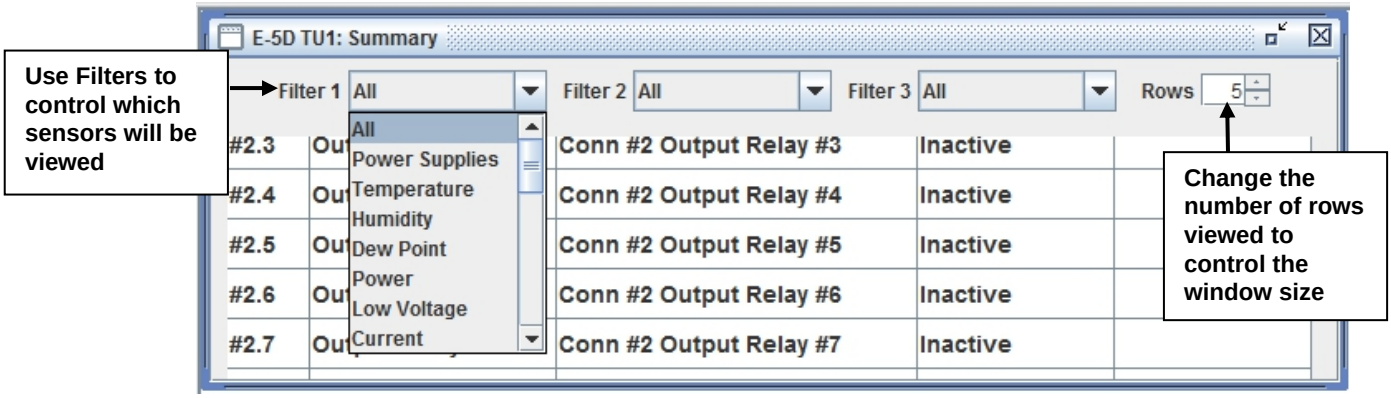

Figure 29- Scrolling window for controlled view of sensor status

By applying limitations to the Filters (1-3), limit the view of the scrolled sensors to only those types of sensors you have an interest in seeing the information on. The status of each is updated dynamically based on the configured refresh rate of each sensor.

A scrolling summary can include only the sensors for a specific unit (as shown in Figure 29), or, it can include sensors from an entire group of ENVIROMUXs (shown in Figure 30).

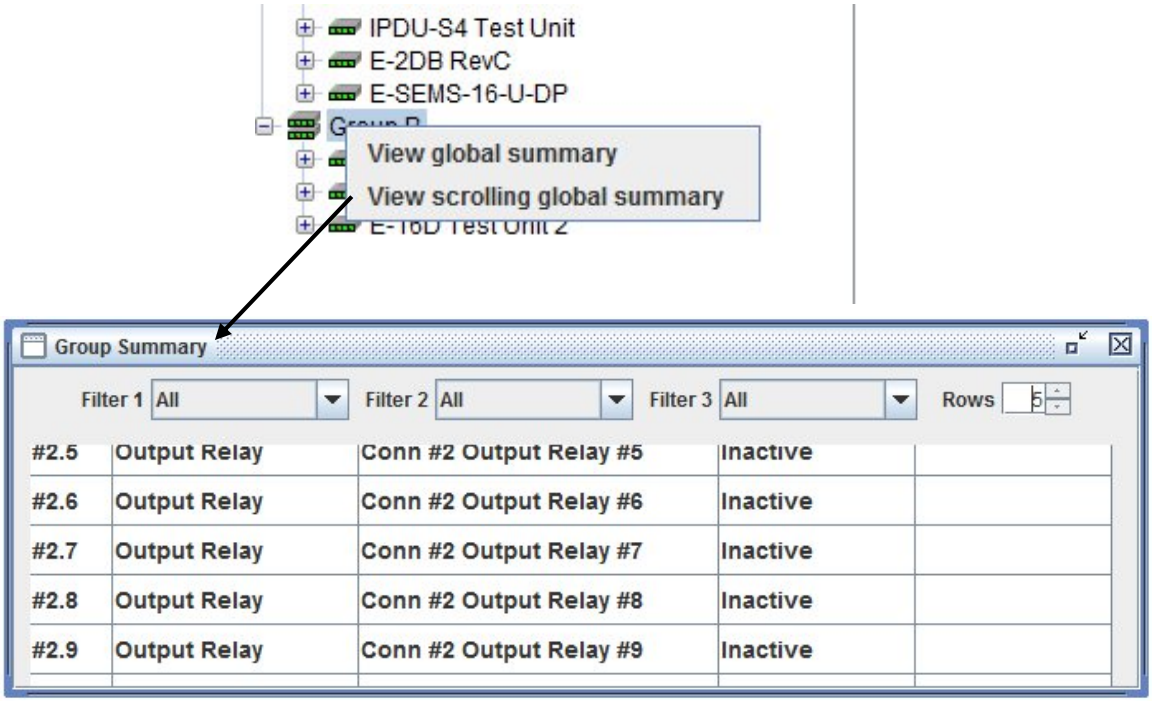

Figure 30- Scrolling summary window can be used for a group of Units

Configuration Options

Click on “Configure System”, “Configure Enterprise”, “Configure Network” or “Configure Security” to access the configuration options of the ENVIROMUX you are managing.

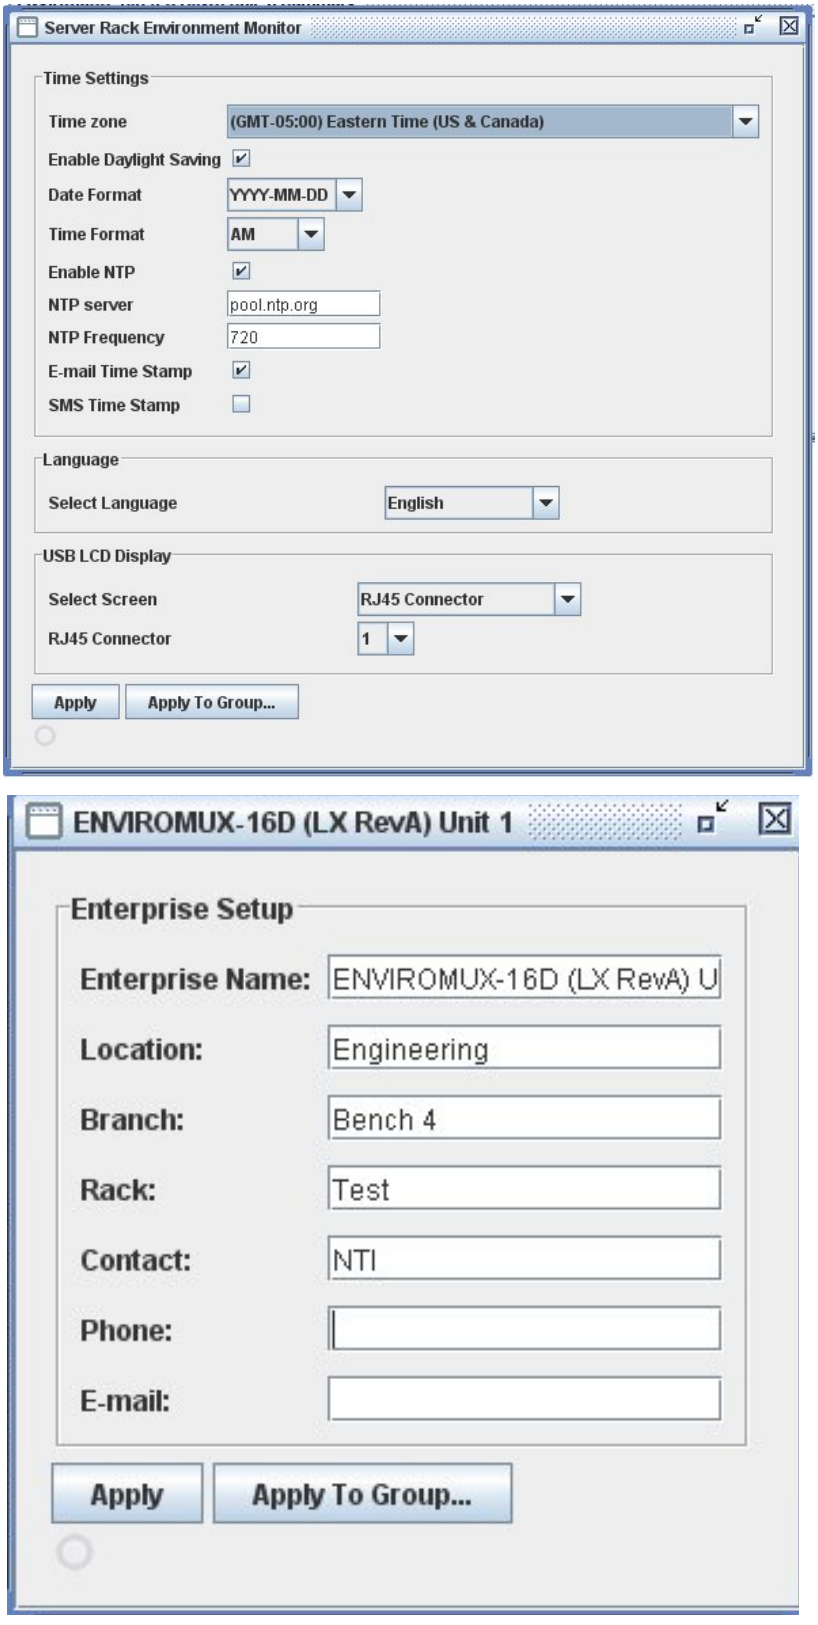

Figure 31- Configure System and Enterprise Settings

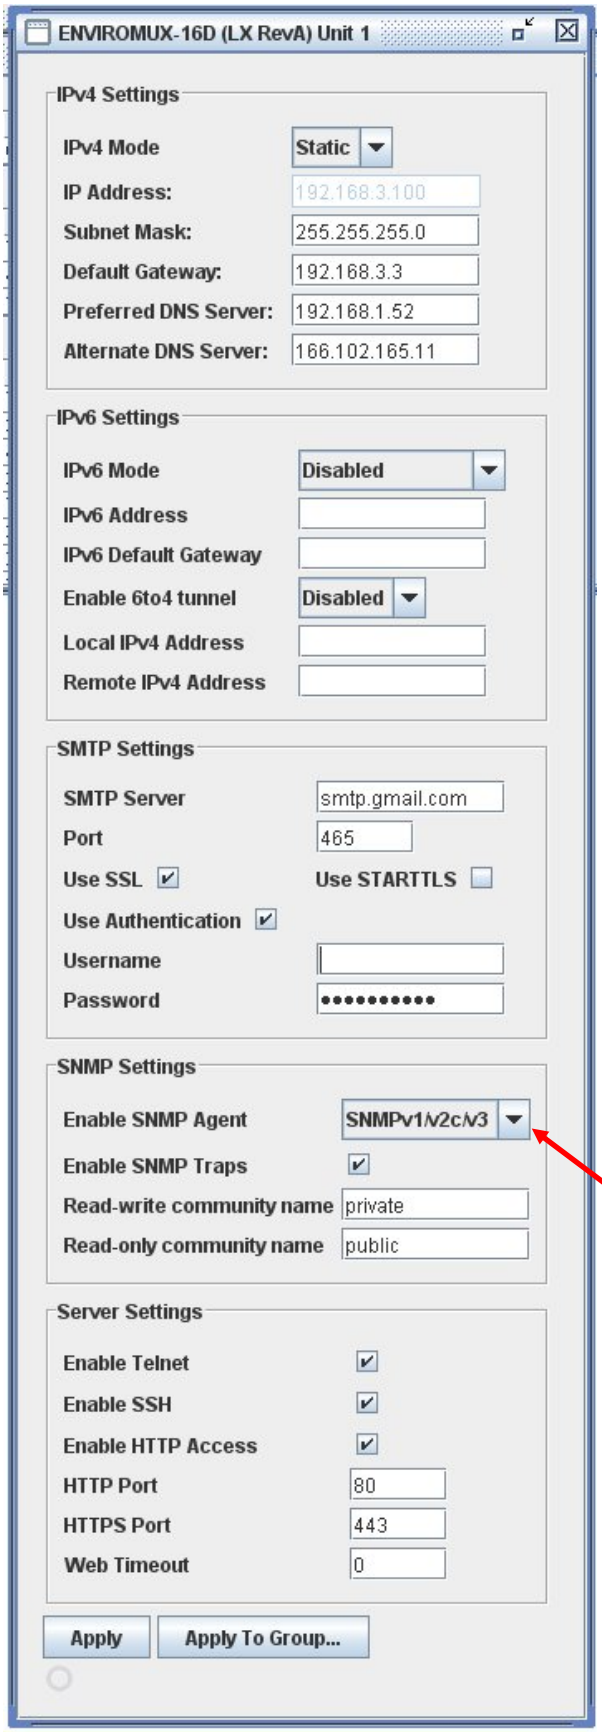

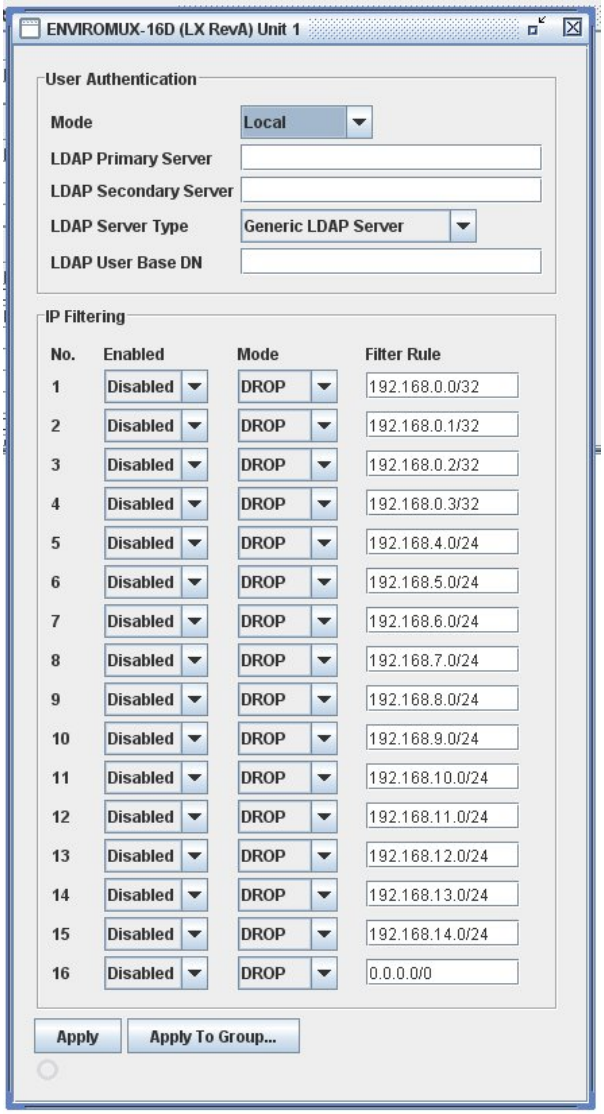

NOTE: SNMP must be enabled in each ENVIROMUX Unit monitored for the ENVIROMUX-MNG to receive and display sensor values.

Figure 32- Configure Network and Security Settings

User Configuration

Click on “Users” to access individual user configurations within each ENVIROMUX.

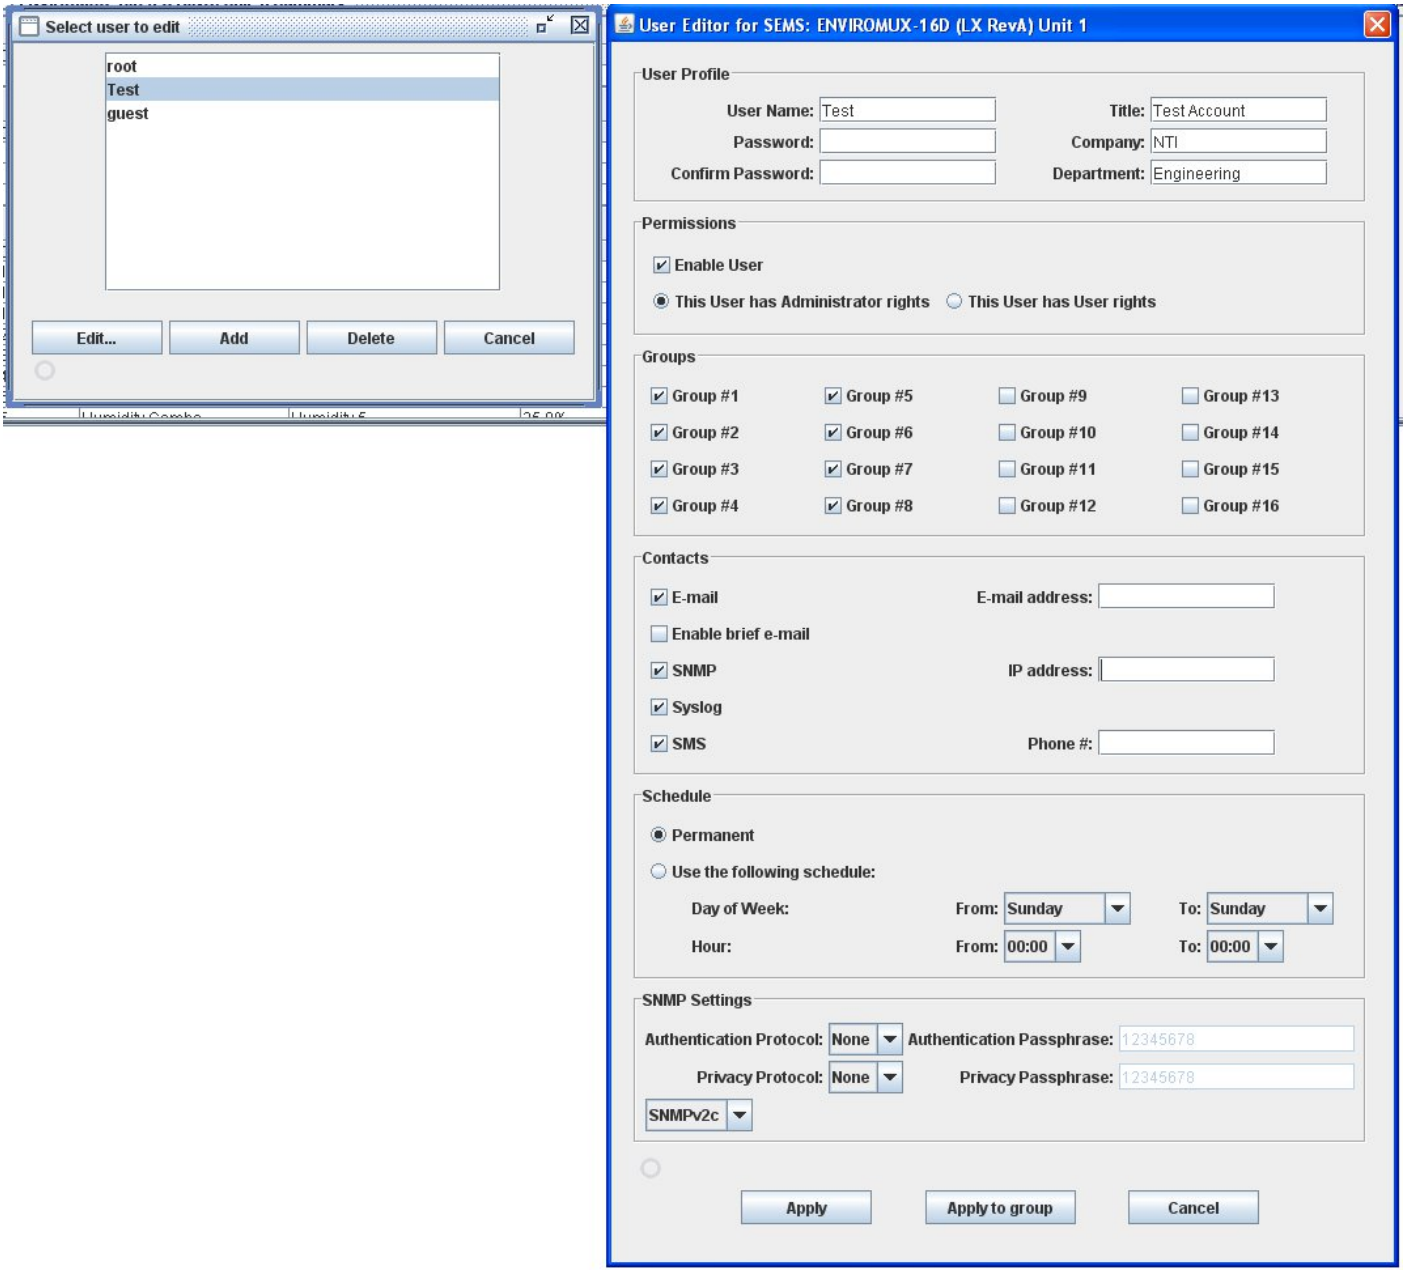

Figure 33- Manage User Settings

Log Configuration

Click on “Configure Log” to control event and data logging information. Determine which sensor groups will generate logs, what types of information should be logged, how overflow is handled, and how users will be communicated with.

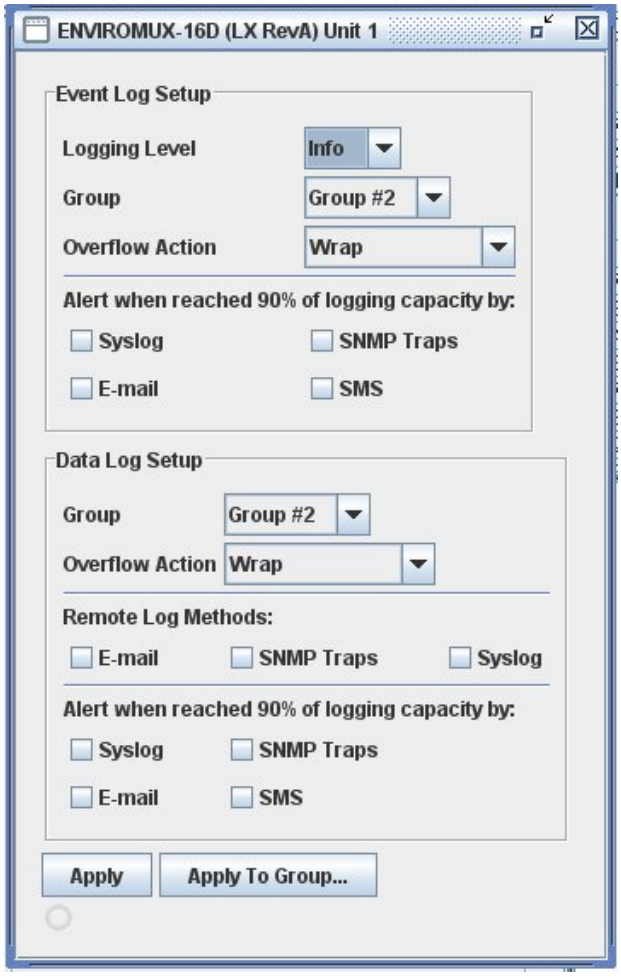

Figure 34- Configure Event Log Setup

Sensor Monitoring and Configuration

Sensor readings can be monitored, settings can be quickly configured to change the criteria for reporting alerts, or they can be removed altogether. Right-click on a sensor to bring up a menu enabling you to Monitor, Configure, Remove a sensor, Start Recording sensor readings taken and View a History Graph of those readings.

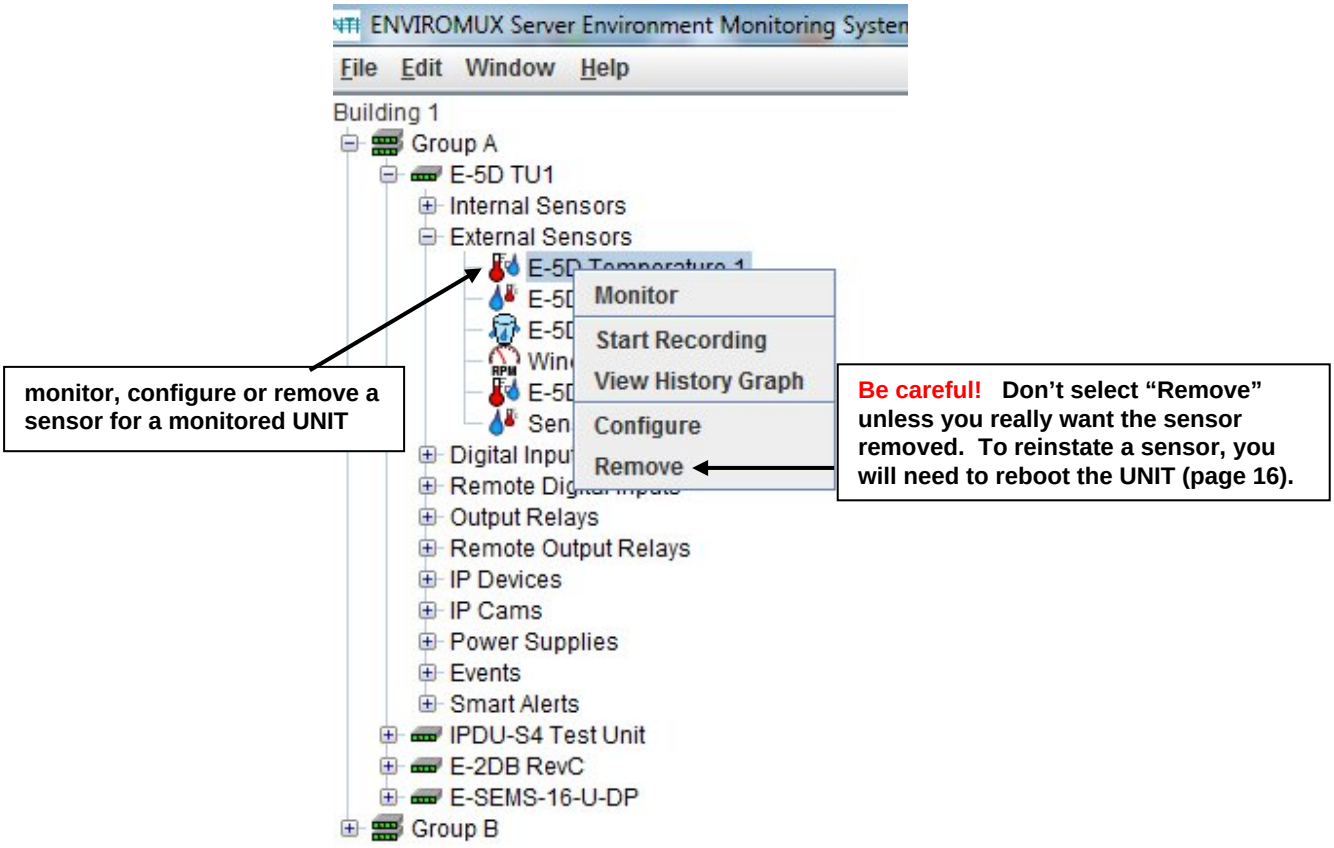

Figure 35- Manage a sensor- choose action

Select "**Monitor**" to see the status of the sensor.

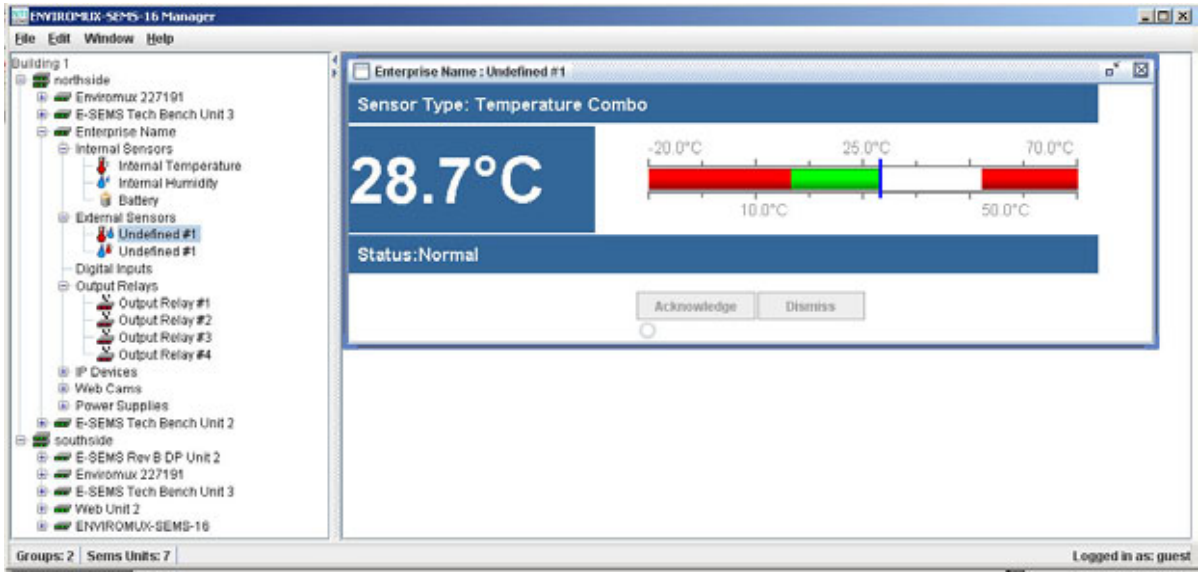

Figure 36- Monitor status of the "Undefined" external sensor

Select "**Start Recording**" to have the readings for the sensor stored in memory. Readings will be stored for up to 120 days, after which old readings will drop off to make room for new readings.

To view the readings stored, select "**View History Graph**".

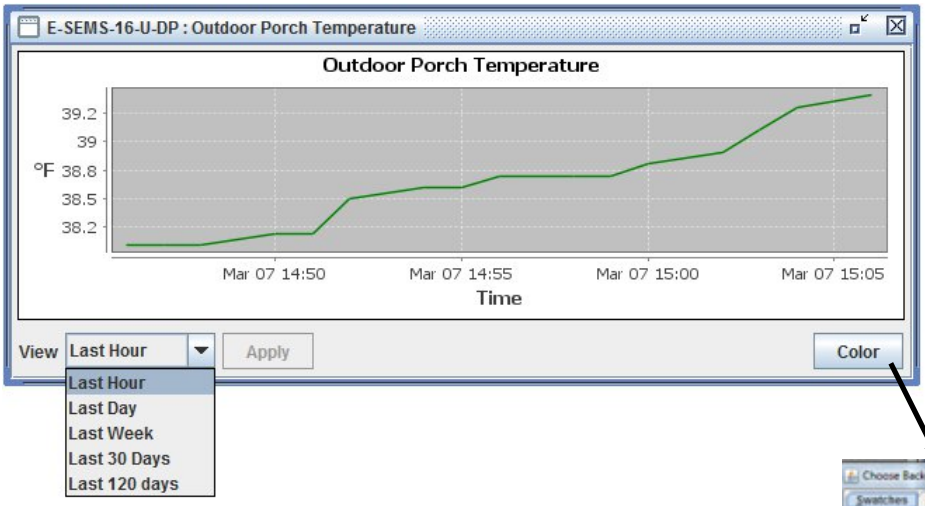

Figure 37- View History Graph

A graph that shows a sensor's readings can be viewed. The time period displayed can be changed to show the last hour, last day, last week, last 30 days or the last 120 days.

The color of the graph can be changed. Click on "Color" to bring up a color chart. Select the desired color and press "OK". (The color change will only take effect as long as you have the history graph open. Once closed, upon reopening the graph the original color will be displayed again.)

The range of readings displayed will adjust as the readings are taken. For example, in the above image, for the time period displayed the range of readings was between 38.2°F. to 39.2°F. If expanded to view the Last Day, the range would automatically update to a wider range of temperatures and adjust the graph accordingly.

If you right-click inside the graph, a menu with more options will be presented. Click on "Properties" to bring up options to change the "Chart Properties" or appearance of the graph.

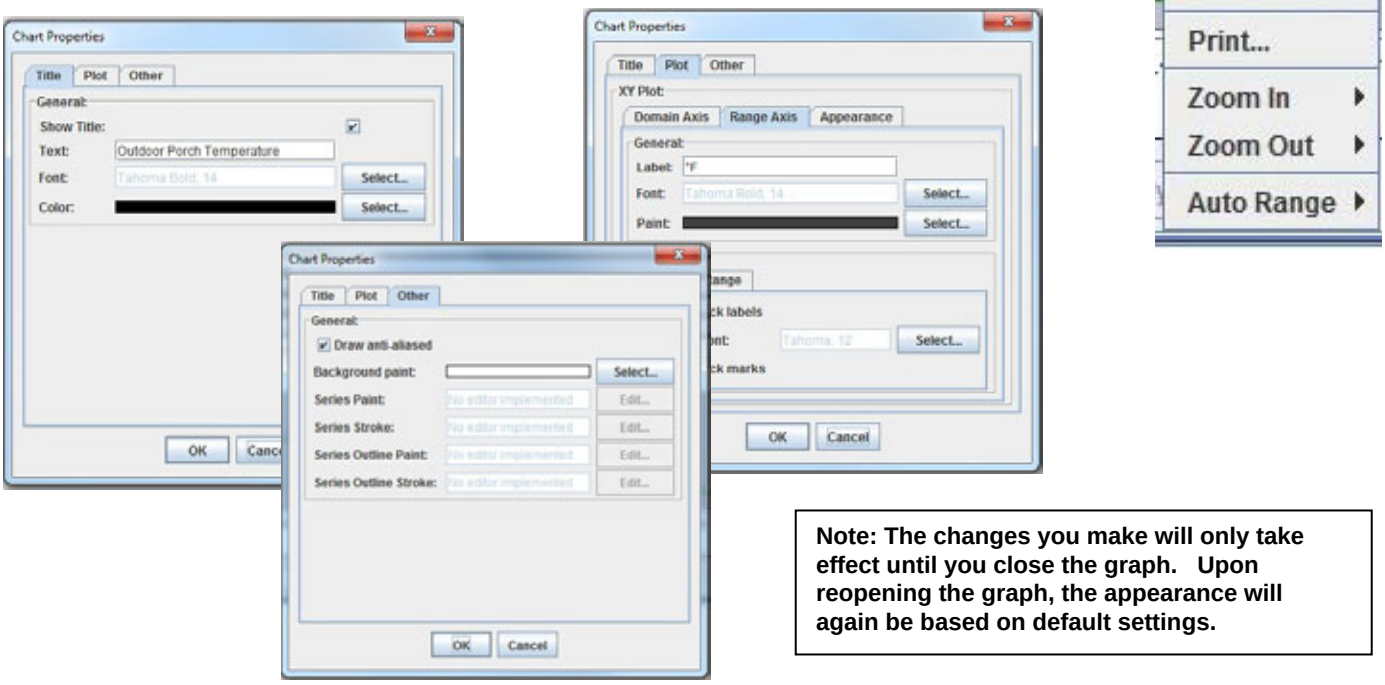

Note: The changes you make will only take effect until you close the graph. Upon reopening the graph, the appearance will again be based on default settings.

Figure 38- Change the appearance of your graph (temporary)

To copy the graph image to your computer's clipboard for pasting into another document, click "Copy".

To save the graph image as a .png image file on your computer, select "Save as…." .

To send the graph image to a printer, select "Print…".

To see greater detail in the graph, the range and/or domain axis can be zoomed in or out. To quickly return to a normal view of the graph, click on "Auto Range-Both Axes".

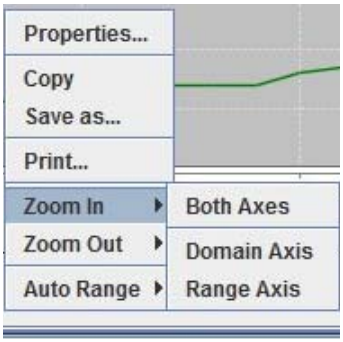

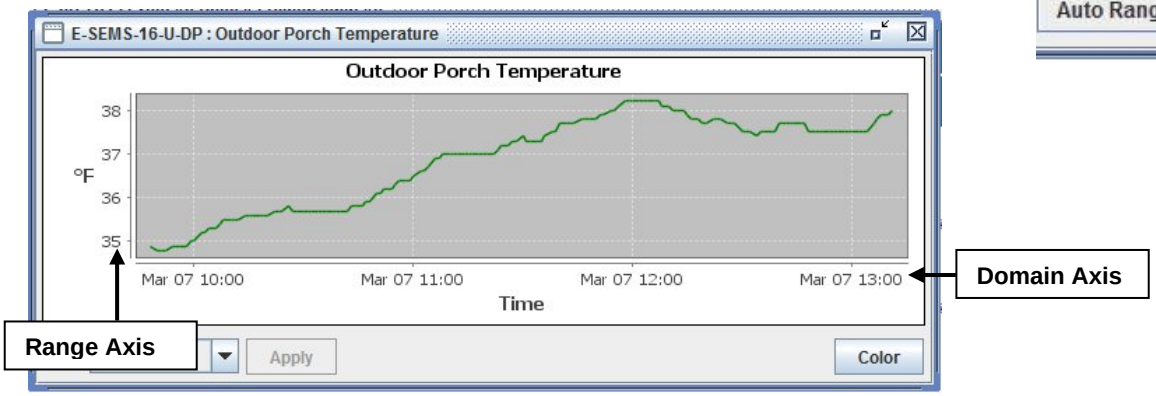

Figure 39- You can zoom your axes

Another way to see greater detail is to select a specific area on the graph dragging from the top in a downward diagonal motion. When you let go of the mouse the graph will update with a closeup of the area you selected.

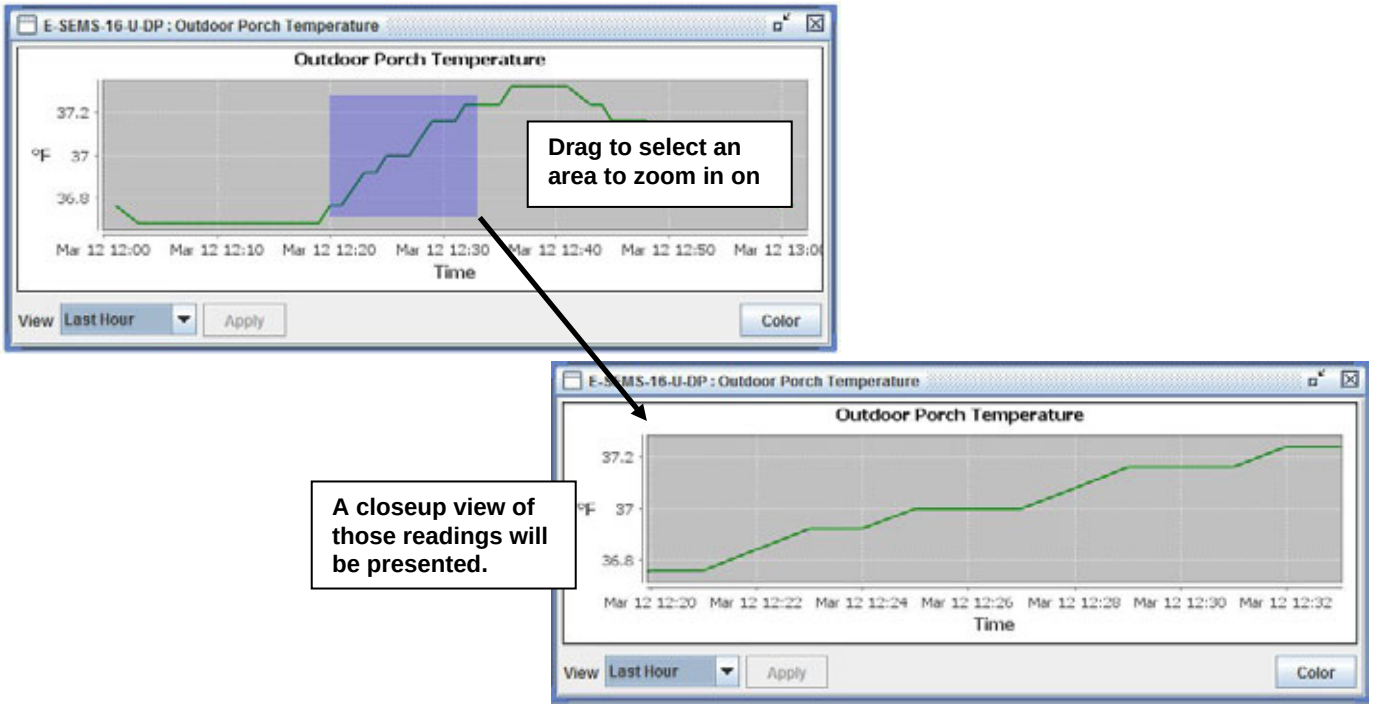

Figure 40- Drag a selected area to zoom in on

To restore the default appearance of the graph, drag upward on the graph.

Select "**Configure**" (from Figure 35) to configure the settings for that sensor.

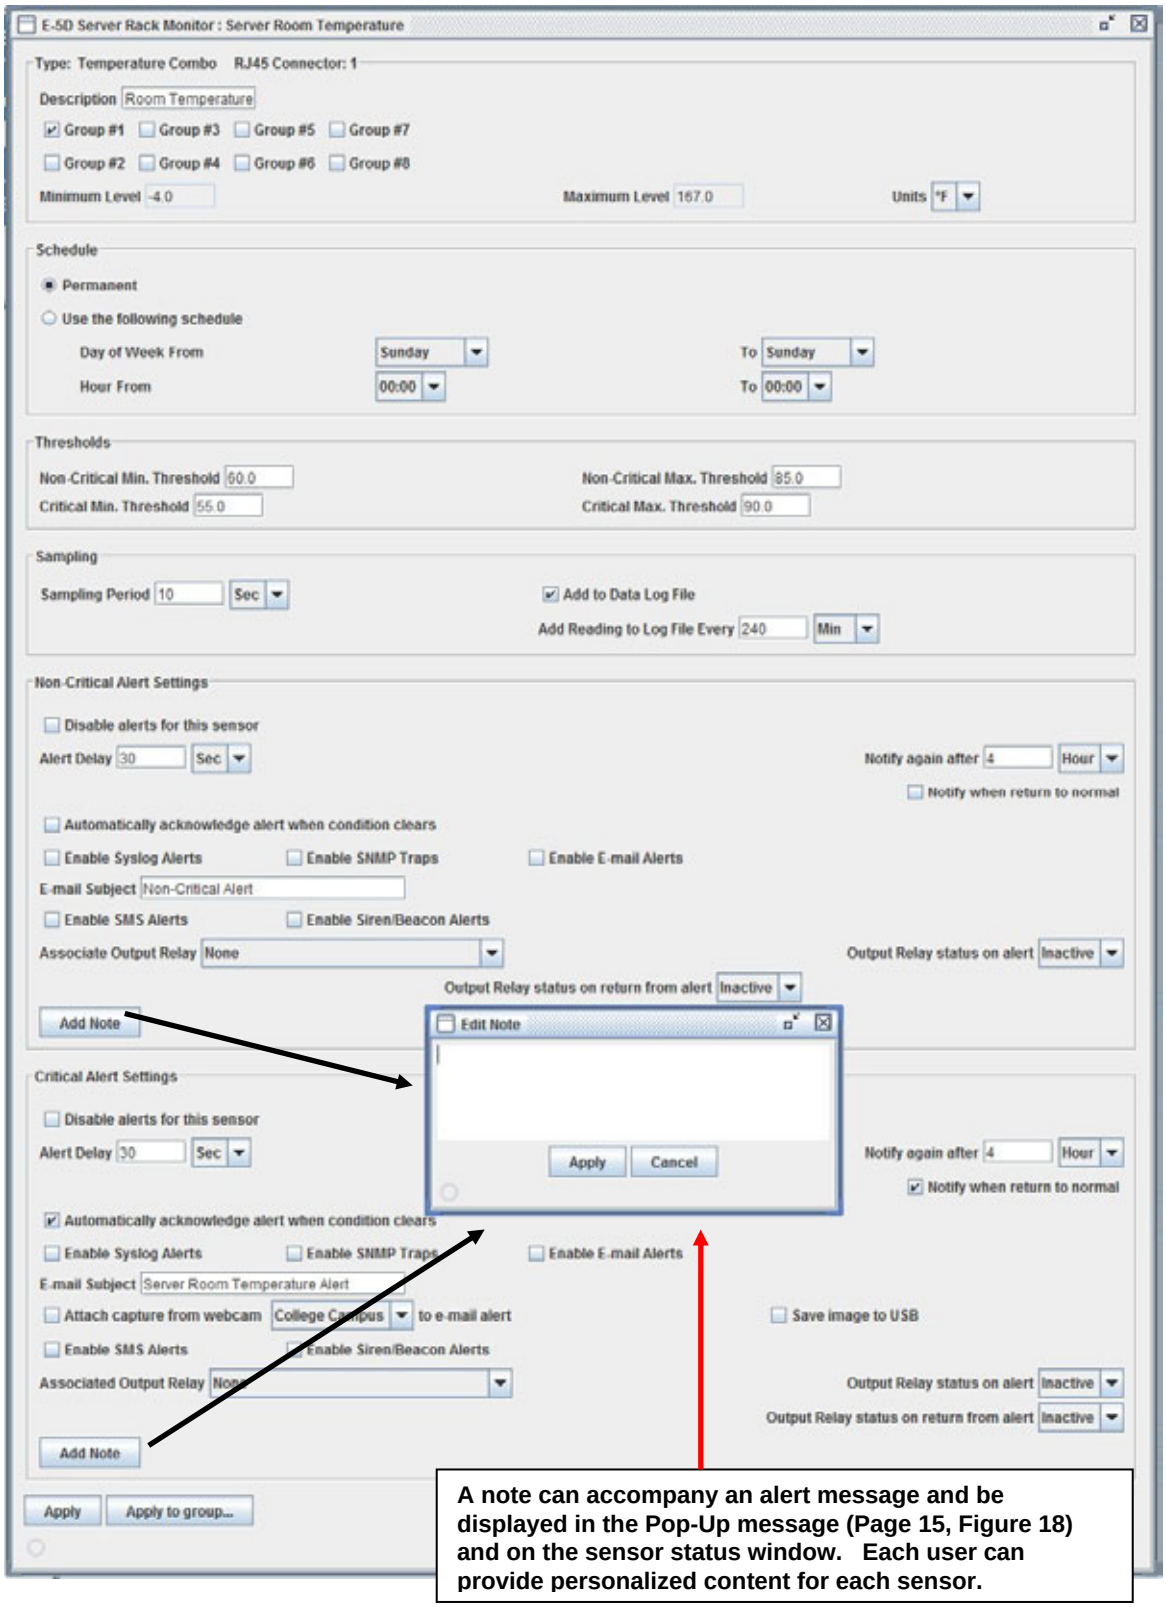

Figure 41- Configure the "Undefined" external sensor

Respond to Alerts

When an alert is present, the first screen in the project will indicate it by displaying the group name in red.

Figure 42- Alert 1- Indication in group

Click on the group name to see which UNIT is reporting an alert.

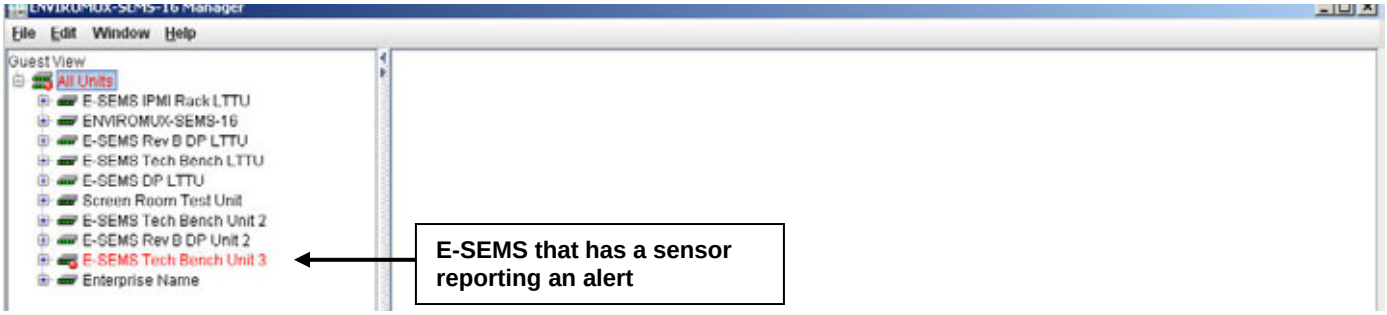

Figure 43- Alert 2- Indication of which UNIT

Click on the UNIT to see which sensor category has an alert.

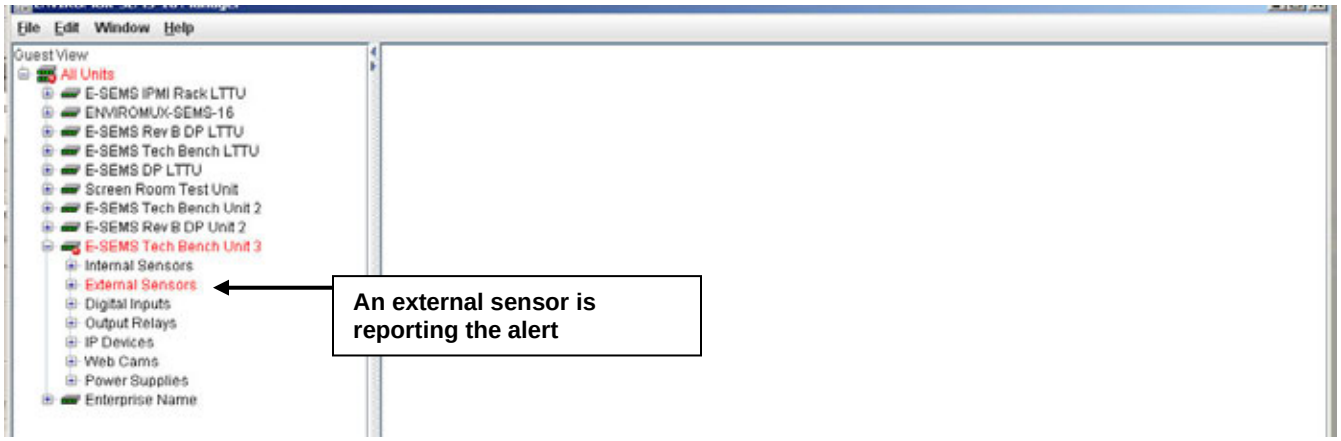

Figure 44- Alert 3- Indication of which sensor group

Click on the sensor group to see which sensor is in alert status.

Figure 45- Alert 4- Indication of which sensor is in alert

Click on the sensor to see the status of the alert and be given opportunity to respond to the alert.

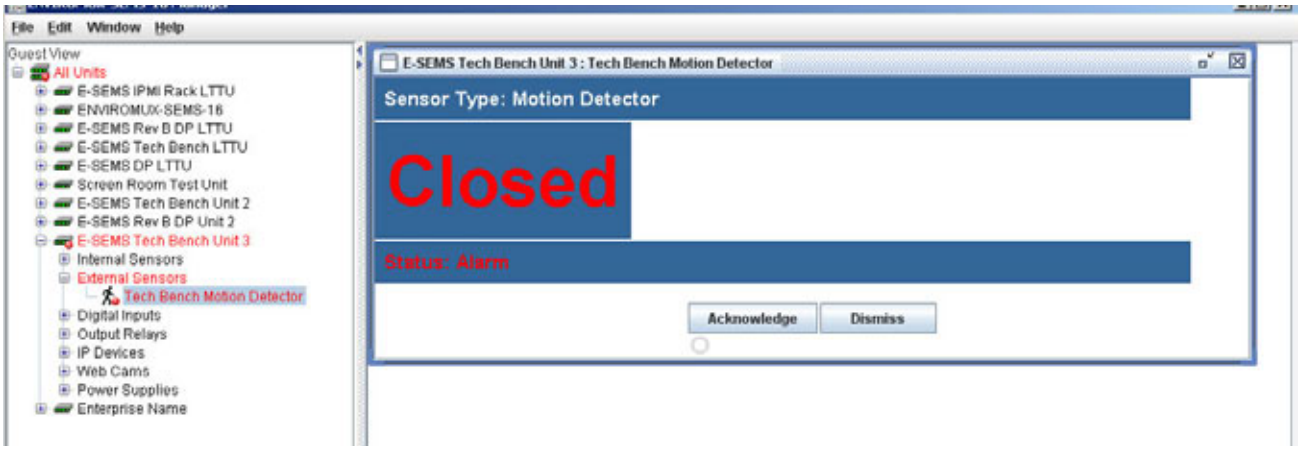

Figure 46- Alert 5- See the alert status

With the sensor status returned to normal, the sensor tree returns to an alert-free appearance.

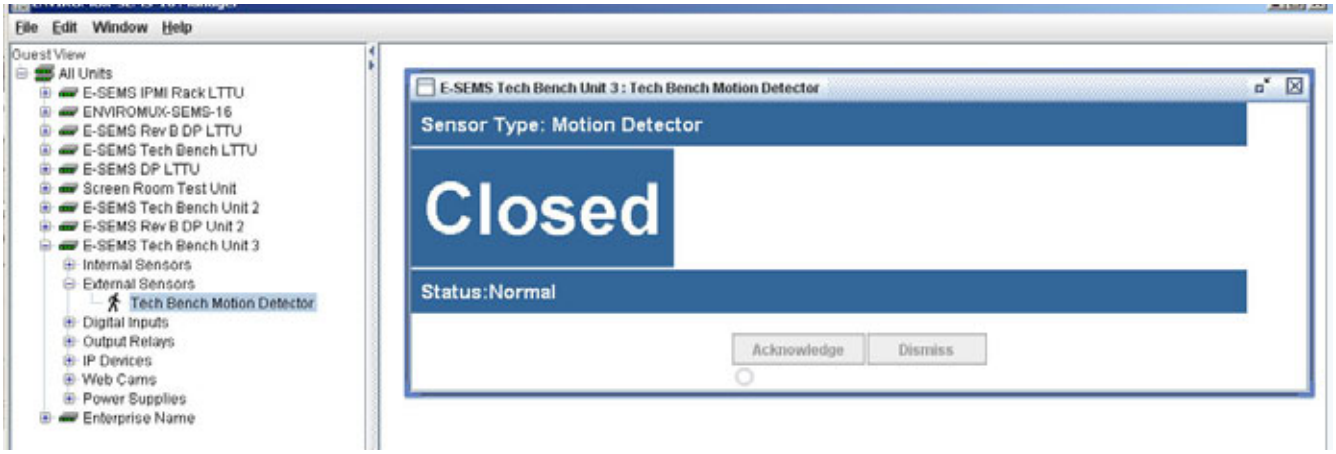

Figure 47- Alert 6- Alert has been acknowledge-status normal

Server Management from the Client

If, at the login screen, you enter the username “root” and the password for root (default is “admin”), the program will open to an administrative menu that provides options for server management. The server can be managed from the graphic interface provided by the server software, from the command line interface, or, in this case, through the client software.

Figure 48- Login as root from Client

The menu for root includes only administrative functions.

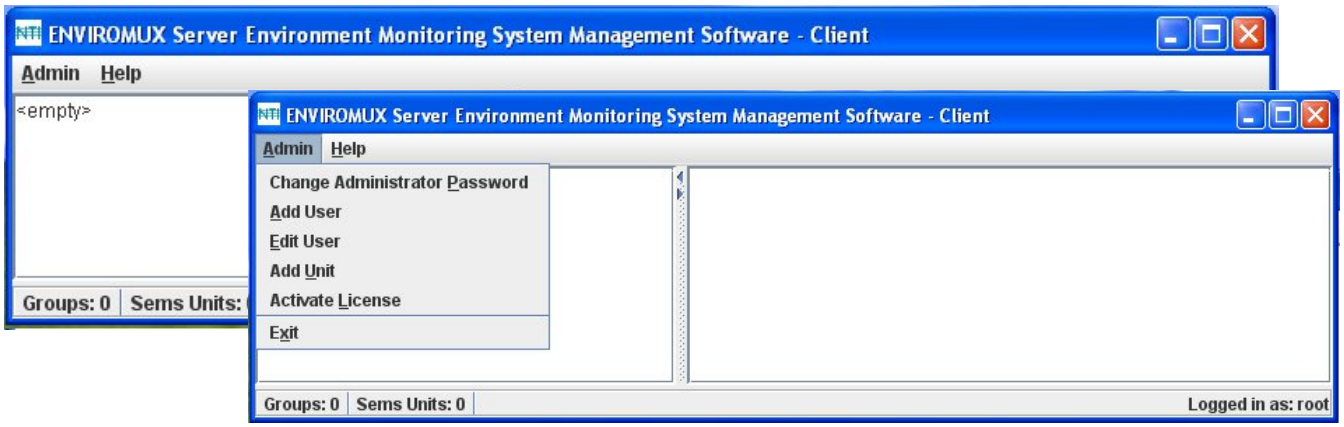

Using these functions you can perform configure the server for password preference, adding, editing, or removing users, adding units, or activating the license.

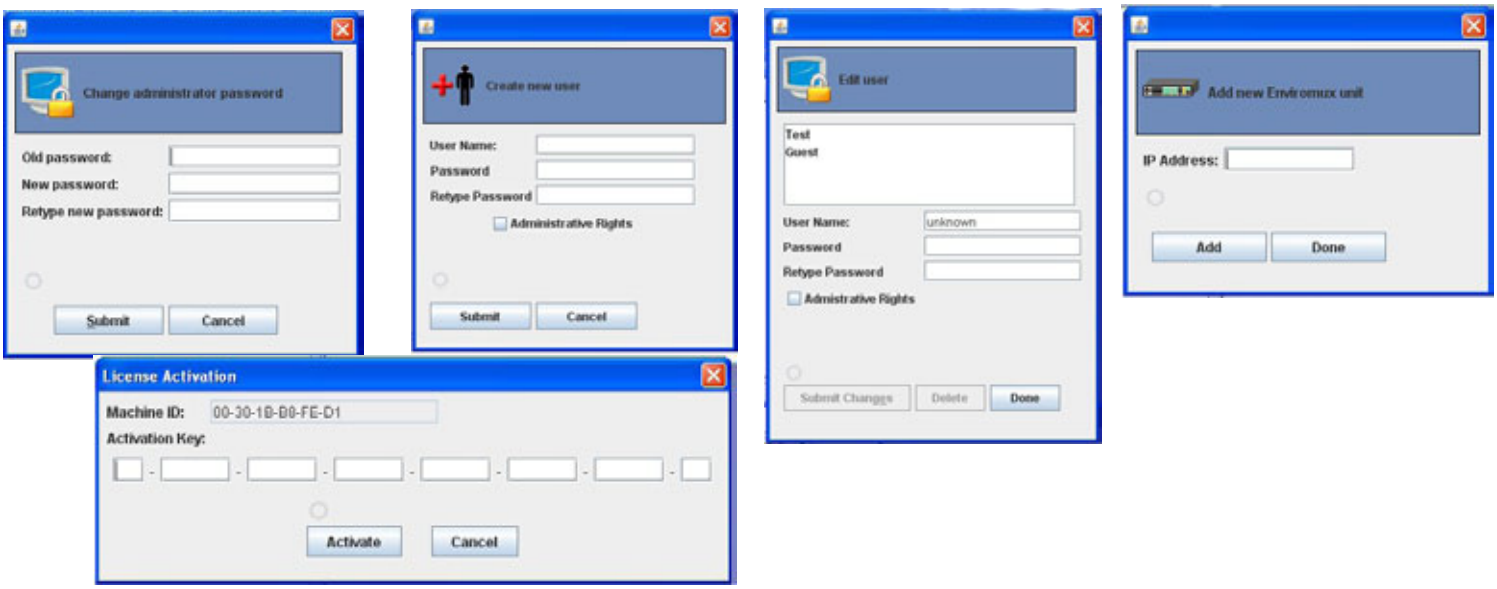

Figure 49- Manage Server from Client

SOFTWARE UPDATE

When newer versions of the ENVIROMUX-MNG become available, you may desire to update your client and/or server software. You will be notified by email that new versions are available, what changes were made to the software, and how to obtain updated software.

To perform an update, simply unzip the new client (`mng-clnt-vx-x.zip`) or server (`mng-srvr-vx-x.zip`) software files into the same directory the present client or server files were installed to (see “Installation” on page 4).
Do not delete any files. None of your data, license, or configuration files will be affected. Once the new files have been unzipped, simply open the client or server as normal (pages 34 and 14). No additional changes or configuration are necessary.

SETUP ENVIROMUX-MNG TO RUN AT STARTUP

You may want to have the server that runs the ENVIROMUX-MNG server application to run the application automatically each time the server that hosts it powers ON. The instruction below should assist you in setting this up.

1. Create a batch file: **`SemsManagerSrvr.bat`** containing the following 2 lines:

```
@ECHO OFF

START "SEMS" /D"<PATH TO SEMS MANAGER SERVER>" "<PATH TO JAVA>" –jar SemsManagerSrvr.jar root admin
```

2. Replace the 2 paths:

`PATH TO SEMS MANAGER SERVER` = the path to the directory containing SemsManagerSrvr.jar (e.g. C:\Test Files\Server)

`PATH TO JAVA =`the path to the Java Runtime executable (e.g. C:\Program Files\Java\jre7\bin\java)

3. Replace the root password “admin” with the one you are using.

`EXAMPLE:` `START "SEMS" /D"\Test Files\Server" "\Program Files (x86)\Java\jre7\bin\java" -jar SemsManagerSrvr.jar root nti`

4. Depending on your operating system version, follow the instructions provided by the links to open the Group Policy Editor and add “SemsManagerSrvr.bat” as a startup script. For Windows 2003, also enable the policy "Run startup scripts asynchronously".

For Windows 2008

1. Open the Local Group Policy Editor: http://technet.microsoft.com/en-us/library/cc731745.aspx
2. Assign Computer Startup Scripts: http://technet.microsoft.com/en-us/library/cc770556.aspx

For Windows 2003

1. Open Group Policy as an MMC snap-in: http://technet.microsoft.com/en-us/library/cc782895%28WS.10%29.aspx
2. Assign Computer Startup Scripts: http://technet.microsoft.com/en-us/library/cc779329%28WS.10%29.aspx
3. Run startup scripts asynchronously: http://msdn.microsoft.com/en-us/library/ms811602.aspx

TROUBLESHOOTING

Problem:
License key is not accepted. When you enter the number and click “Activate”, nothing happens.

Cause:
The PC the server is installed on is running Windows 7 and has Java version 1.8 installed. Java 1.8 will not allow the license to be installed.

Solution:
1. Uninstall Java version 1.8 from the Windows 7 PC. Install Java version 1.7 instead.
2. Deactivate User Account Control (see page 7)
3. Install the License key completely.
4. Re-install Java version 1.8.
5. If desired, reactivate User Account Control in Windows 7.

INDEX

add ENVIROMUX-MNG users, 10
add UNITS to monitor, 8
command line, 7, 12
configure sensors, 27
Device Discovery Tool, 9
edit ENVIROMUX-MNG users, 10
installation, 3
Java Runtime Environment, 9
licensing, 3
limitations, 2
login at client, 13
Machine ID, 4
open project, 17
permanent license, 5
project management, 14
reload lost connection, 11
respond to alerts, 31
sensor summary, 20
server management, 7, 8, 33
temporary license, 4
UNIT loses connection, 11
UNIT Management, 20
using a client, 13